


VOGT TUBE ICE, LLC
1000 WEST ORMSBY AVENUE
LOUISVILLE, KY 40210
TEL: 800-853-8648 OR 502-635-3000

Vogt[®]
SERVICE MANUAL
and parts catalogue

MODELS 1500 THRU 4000

Tube-Ice[®] **MACHINE**

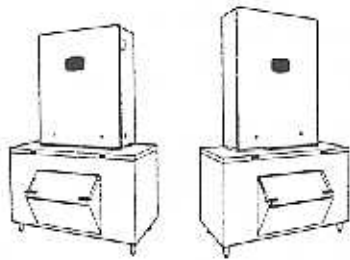


Voegt

TUBE-ICE MACHINES

TABLE OF CONTENTS

<u>LIST OF ILLUSTRATIONS</u>	<u>PAGE</u>
Schematic Piping Diagram Figure 1	4
Installation Method "A" Figure 2	6
Method "E" Figure 3	6
Method "C" Figure 4	7
Control Panel Figure 5	11
Freezer Pressure Switch Figure 6	15
Safety Pressure Switches	
Low Pressure Switch Figure 7	15
High Pressure Switch Figure 8	16
Ice Bin Thermostat Figure 9	16
Cross Section View of Cutter Figure 10	20
Partial Front View Figure 11	24
Wiring Diagram Typical Figure 12	25 & 26
Actual Figure None	Back Cover
Capacity Tables Figure 13	28
Normal Operating Vitals Figure 14	29
Table of Weights Figure 14	10
Nomenclature Picture (Front) Figure 16	36
Nomenclature Picture (Rear) Figure 17	37
<u>PRINCIPLE OF OPERATION</u>	
<u>ADJUSTING AND STARTING MACHINE</u>	
Erection	5
Installation	5
Electrical Connection	11
Water and Drains	12
Refrigerant Charge	12
Initial Start	13
Expansion Valve	13
Freezer Pressure Switch	14
Safety Pressure Switches	15
Ice Bin Thermostats	16
Thawing Timer	17
Ice Selector Switch	17
Adjustable Blowdown (During Freezing)	18
Automatic Blowdown (During Thawing)	18
Float Valve (Makeup Water)	18
Condenser Pressure Regulator	18 & 19
Compressor Crankcase Heater	19
<u>SERVICE OPERATIONS</u>	
Condenser Cleaning	19
Shell and Coil Condensers	19
Cutter and Gear Drive	20

MODELS 1500 THRU 4000

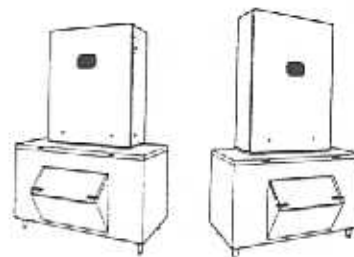

CONTENTS (Continued)

<u>SERVICE OPERATIONS (Continued)</u>	<u>PAGE</u>
Pumping Down Freezer	20
Removal of Refrigerant from Machine	21
Refrigerant Leaks	21
Non-Condensable Gases	21
Compressor Motor Burnout	21
Solenoid Valves	22
Water Distributors	22
Water Pan	22
Cleaning Instructions - Ice Making Section	22
Electrical Fuses	23
 <u>LUBRICATION</u>	
Compressor	23
Cutter Gear Motor	24
Cutter Bearing	24
Circulating Water Pump Motor	24
 <u>WIRING DIAGRAMS</u>	
	25
 <u>SYMPTOMS AND PROCEDURE</u>	
Freezeup Due to Extended Freezing Period Table A	30
Freezeup Due to Ice Failing to Discharge Table B	31
Low Ice Capacity Table C	32
Safety Pressure Switches Stop Machine Table D	33
Motor Overload Protectors Stop Machine Table E	34
Normal Operating Vitals	29
 <u>PARTS LIST (MACHINE)</u>	
	35-48
 <u>CAPACITY TABLE</u>	
	28
 <u>ALTERNATE REFRIGERANT</u>	
	49
 <u>DRAWINGS</u>	
Space Diagrams	
Water Cooled	8
Air Cooled	9
Cutter Assembly	
M1500 and M2500	
M1800, M3000 and M4000	51
Ice Discharge Arrangement	52
Front Casing Assembly	53
Thermostat Bulb Locations	54

THE HENRY VOGT MACHINE CO.

HAS BEEN BUILDING QUALITY REFRIGERATING EQUIPMENT SINCE 1880. ALL THE SKILL IN ENGINEERING AND FABRICATION THAT NEARLY A CENTURY OF EXPERIENCE HAS TAUGHT IS REFLECTED IN THIS UNIT. SINCE ITS INCEPTION IN 1938, THE TUBE-ICE PROCESS HAS BEEN WIDELY RECOGNIZED AS THE ONLY MODERN MEANS OF PRODUCING SIZED ICE. THE MANY VARIED TYPES OF INSTALLATIONS HAVE PROVEN THE MACHINE'S ECONOMIC AND RELIABLE OPERATION.

FURNISHED WITH EACH MACHINE IS ITS "CERTIFICATE OF TEST" - A SAMPLE SET OF OPERATING DATA WHICH IS A RECORD OF THE UNIT'S SATISFACTORY OPERATION ON OUR FACTORY TEST FLOOR. IT IS EVIDENCE OF OUR DESIRE TO DELIVER TO YOU THE "FINEST ICE MAKING UNIT EVER MADE".

THIS MANUAL HAS BEEN DESIGNED TO ASSIST YOU IN THE SETTING, STARTING AND MAINTENANCE OF THE UNIT. YOUR TUBE-ICE MACHINE WILL GIVE A LIFE-TIME OF SERVICE IF REASONABLE INSPECTION AND ATTENTION IS PROVIDED AND THE SUGGESTIONS IN THIS MANUAL ARE CAREFULLY READ AND FOLLOWED.

PRINCIPLE OF OPERATION

The operation of the machine is controlled by the on-off/thaw switch (10) located in the control panel of the freezing unit. The operation is also controlled by the Ice Bin Thermostats which will automatically stop and start the Freezing Unit by the level of the ice in the Storage Bin (NOTE - See "ERECTION" for instructions on installation of the Control Bulb of the Ice Bin Thermostats). The type ice produced (cylinder or crushed) is determined by the position of the Ice Selector Switch (9) located inside the Control Panel. The Control Panel is arranged so that the unit will stop only upon the completion of a thawing period whether by action of the "ON-OFF/THAW" Switch or the Ice Bin Thermostats.

The "Ice-Clean" Toggle Switch (99) must always be set on the "ICE" position during normal ice-making operation. It is set on the "CLEAN" position only when the equipment is to be cleaned as outlined in the "Cleaning Procedure" instructions attached to the machine.

If it should become necessary to instantly stop the machine, either the external disconnect switch or one of the circuit breaker switches (#62 or #63) in the Control Panel may be turned "off".

Figure 1 illustrates the piping diagram of the refrigerant and water system of the Tube-Ice Machine, with numbers for easy reference. (Page 4)

The Freezer (2) is a shell and tube type vessel. During the freezing period, water is constantly recirculated through the vertical tubes of the freezer by a Centrifugal Pump (6). Makeup water is maintained by a Float Valve (12) in the Water Pan (7). Solenoid Valve (20) is open and Solenoid Valve (18) is closed.


Refrigerant gas from the top of the freezer passes through the Heat Exchanger (13) to the Compressor (3) which discharges it into the Condenser-Receiver (15 or 15R). Liquid refrigerant from the Condenser-Receiver flows through the Thawing Chamber (16) of the Freezer, the Drier (46), the Heat Exchanger (13), the Expansion Valve (17) and into the Freezer, thereby completing the freezing circuit.

At the completion of the freezing period, thawing is started by action of the Pressure Switch (56) in the Control Panel and Solenoid Valve (18) is opened. The Water Pump (6) is stopped and the Ice Cutter (21) is started. Hot gas from the condensing system is discharged into the freezer through valve (18), thereby slightly thawing the ice which drops on the Rotating Cutter for sizing.

Cylinder Ice will be discharged through the right half-section of the Ice Discharge Chute when viewing the Tube-Ice Machine from the front (Control Panel). Crushed Ice will be discharged through the left half-section of the Ice Discharge Chute.

Vogt®

Tube-Ice[™] MACHINE

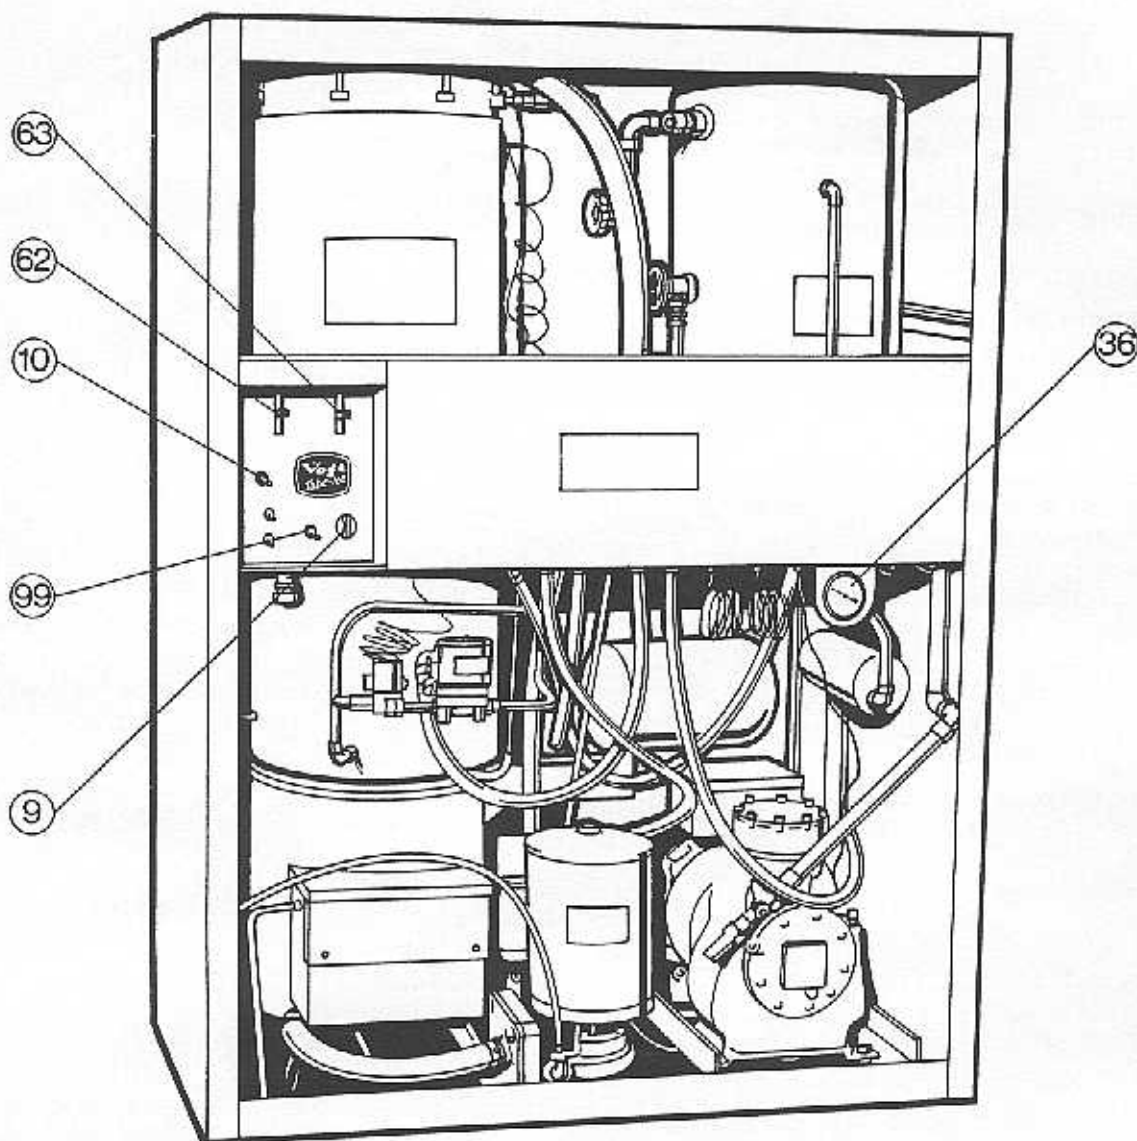


SHOWN WITH FRONT PANEL REMOVED

- ⑨ Ice Selector Switch (Crushed/Auto/Cylinder)
- ⑩ On-Off/Thaw Switch
- ③⑥ Condenser Pressure Gauge
- ⑥② Circuit Breaker Switch (for Cutter Motor)
- ⑥③ Circuit Breaker Switch (for Pump Motor)
- ⑨⑨ Ice/Clean Switch

Vogt®

Tube-Ice™ MACHINE

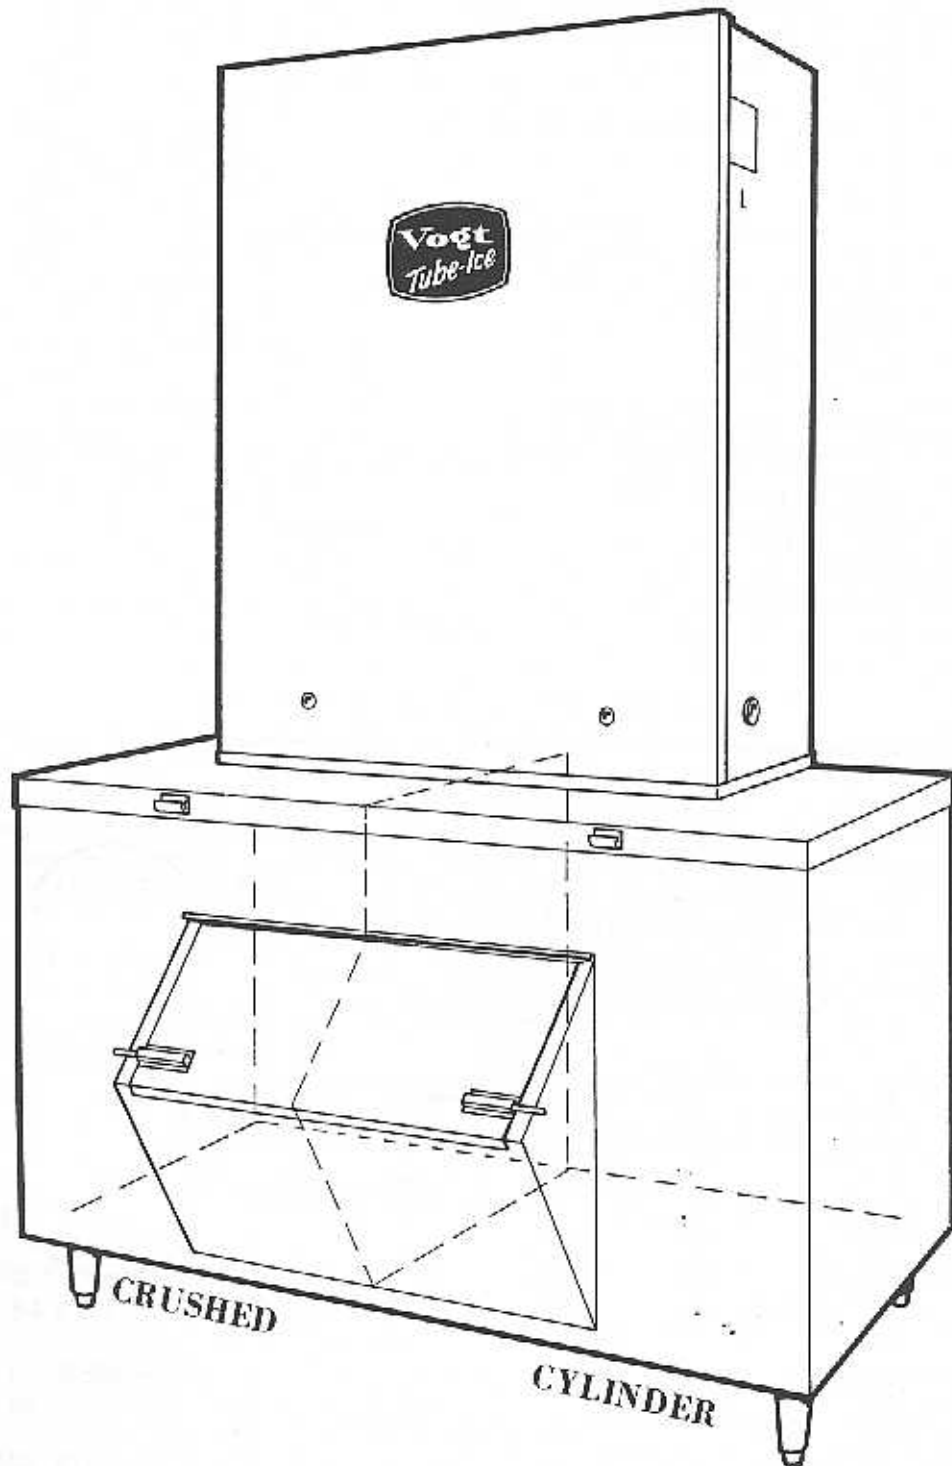


SHOWN ON TYPICAL ICE STORAGE BIN


See page 54 for location thermostat bulbs.
See page 16 for adjustment of thermostats.

PIPING DIAGRAMS

REF. & WATER CIRCUITS

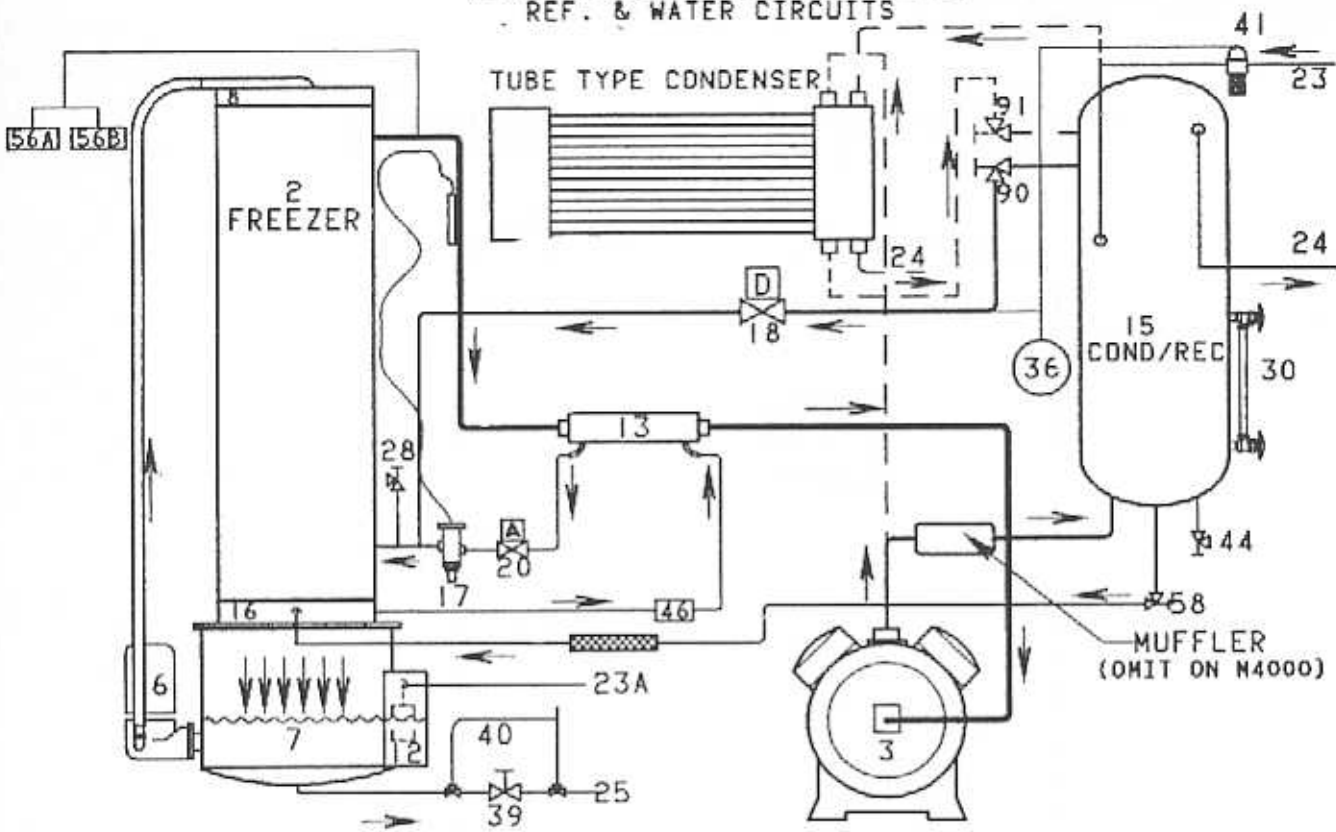

WATER COOLED

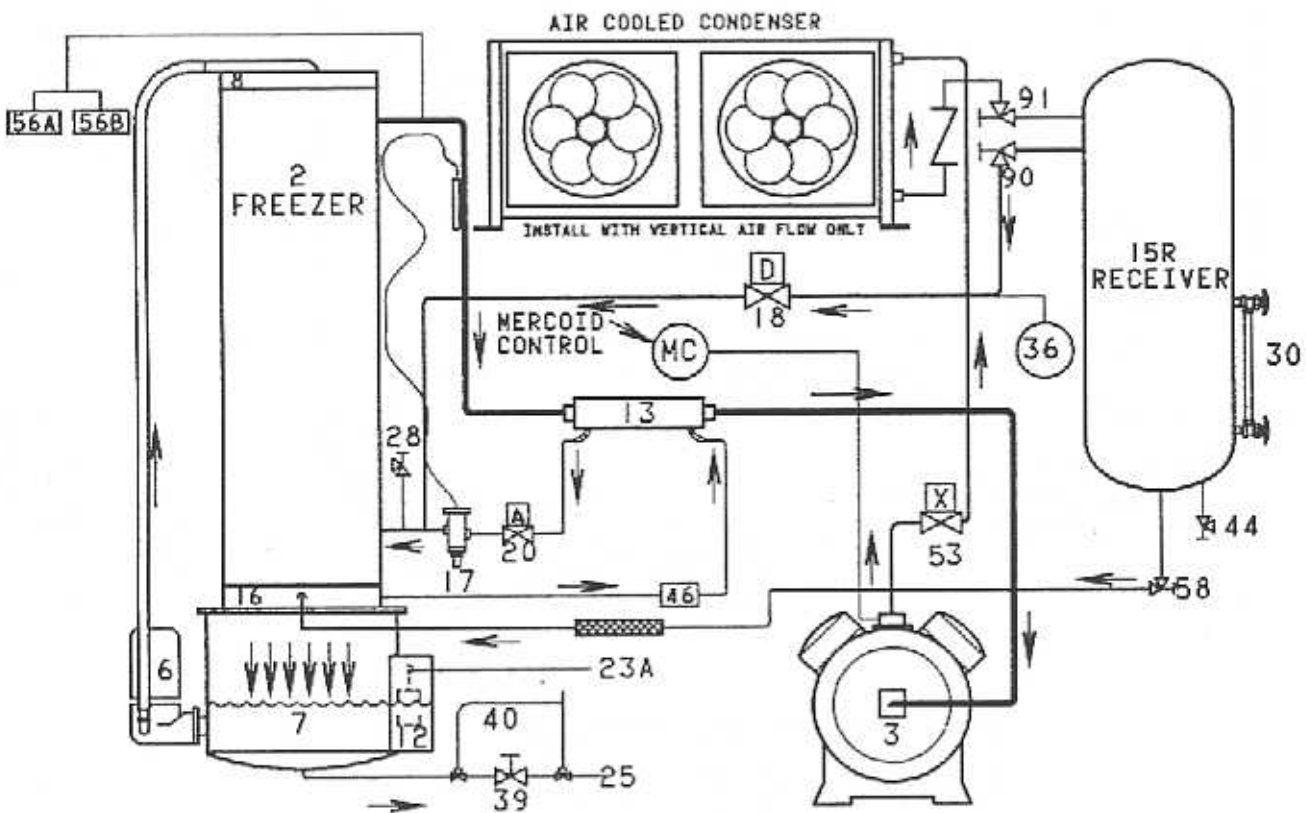

AIR COOLED

FIGS. 1

ERECTION

General Installation instructions are shipped attached to the front of each unit and are duplicated in this manual between pages 5 and 7.

A chart on Page 10 has been provided that includes shipping weights, operating weights, refrigerant charge, etc., for each size machine.

A level solid footing should be provided on which to set the machine. Four feet for the Ice Storage Bin, which have been removed for shipping purposes and placed inside the bin, should be screwed into the bottom of the bin. These feet may be used as leveling screws if the necessary adjustment is minor.

The Ice Storage Bin should be positioned at its ultimate location and the Freezing Unit elevated and placed inside the ledge formed by the top of the bin. The ice discharge chute and the opening into the storage bin must be sealed against entrance of any contamination. The top of the bin also serves as a drip pan to collect and drain any condensate that accumulates during normal operation of the equipment. The condensate drain connection is located at the rear top of the bin.

Two opposed top corners of the freezing unit are provided with 9/16" holes and eyebolts are provided for handling the machine during erection.

There are two thermal shut-off switches (or Ice Bin Thermostats) located inside the Control Panel of the Freezing Unit. The Control Bulb of each switch should be snapped into the bracket in the Storage Bin before starting the unit. These switches will stop the machine (upon completion of the thawing period) when the bin is full of ice and automatically start it again when ice is removed from the bin. Refer to the section ICE BIN THERMOSTATS for detailed instructions and adjusting these switches.

The Freezer Unit and the Air-Cooled Condenser are shipped separately and it is necessary to complete the refrigerant piping and electrical wiring between the two after installing them at their ultimate location.

The Air-Cooled Condenser may be mounted as shown in drawing depicted on Page 9 and placed at the nearest convenient location having adequate air supply for condensing purposes. Remove the blind flanges on the Compressor Discharge and Liquid Lines of the freezing unit and pipe these lines to the connections on the Air-Cooled Condenser (Max. Distance 50 ft.)

Open the stop valve in the Liquid Line between the Receiver and the Air-Cooled Condenser. This applies refrigerant pressure to the lines connecting the Air-Cooled Condenser to the freezing unit. If all connections are checked and found tight, close the stop valve at the Receiver and release the test pressure thru the gage port on the Compressor Discharge Service Valve (45).

With stem of Compressor Discharge Service Valve at half-open position, connect a vacuum pump at the gage port and evacuate air from the Air-Cooled Condenser after which the Compressor Valve should be back seated and the vacuum pump removed.

The electrical leads of the Air-Cooled condenser Fan Motor are to be connecting to Terminals 27 and 29 in the Control Panel of the freezing unit.

INSTALLATION INSTRUCTIONS

VOGT TUBE-ICE MACHINES
MODELS 1500, 1800, 2500, 3000 & 4000

Having removed shipping carton and shipping braces, read instructions carefully before installing Tube-Ice Machine.

- I. Set ice storage bin in proper location and level, except when using installation method "B" listed below.
- II. Remove the four (2) bolts securing unit to shipping skid.

III. Set unit in position on ice storage bin. The following are four suggested methods

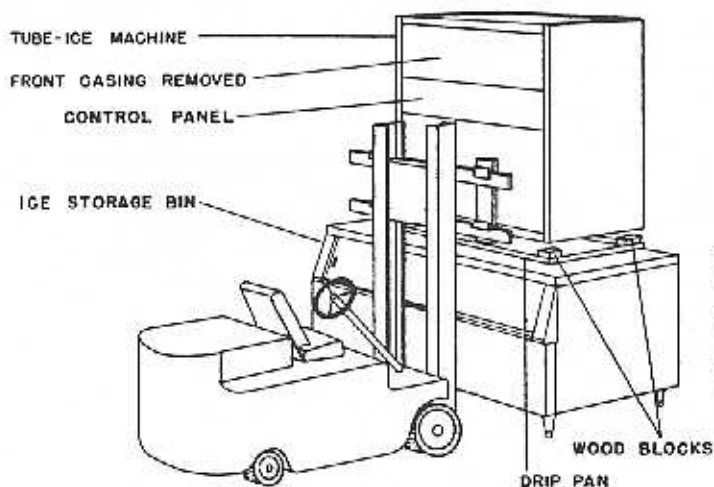


FIGURE 2

A. Method "A" requires the following materials:

- 1 - Forklift truck with adequate load and height capacities.
- 8 - Wood blocks 2" thk. (4" sq. recommended).
- 2 - Wood 2" x 4" x 3'-0" lg.
- 2 - Pry bars.

1. Position Tube-Ice Machine on forks, exercise caution with this procedure and keep in mind that unit is somewhat top heavy to the front.
2. Stack two (2) blocks of wood in each of the four (4) drip pan corners.
3. Set the Tube-Ice Machine directly above drip pan on wood blocks.
4. Remove fork truck.
5. Stack 2 x 4's beside drip pan overlapping front and back of bin.
6. Using pry bar with fulcrum on 2 x 4's, raise side of machine enough to remove top wood blocks. (Don't remove top and bottom blocks at same time).

7. Repeat steps 5 and 6 on other side.

8. With machine sitting on one (1) block under each corner, repeat steps 5, 6, and 7.

9. Last step will bend drip pan flanges which will require straightening.

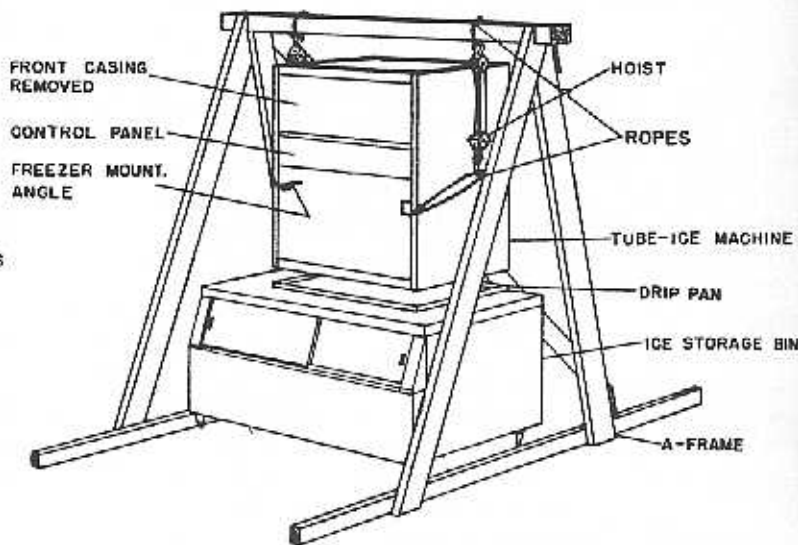


FIGURE 3

B. Method "B" requires the following materials:

- (One)-"A" frame with adequate load and height capacities.
- (Two)-Hoists having adequate lift capacity and method of attaching to "A" frame.
- (Two)-Nylon slings or ropes long enough to fasten around side casing.

1. Position machine in proper location.
2. Hoist machine high enough to slide bin under it.
3. Position and level bin under machine.
4. Slowly lower machine on bin.
5. Remove "A" frame and slings.

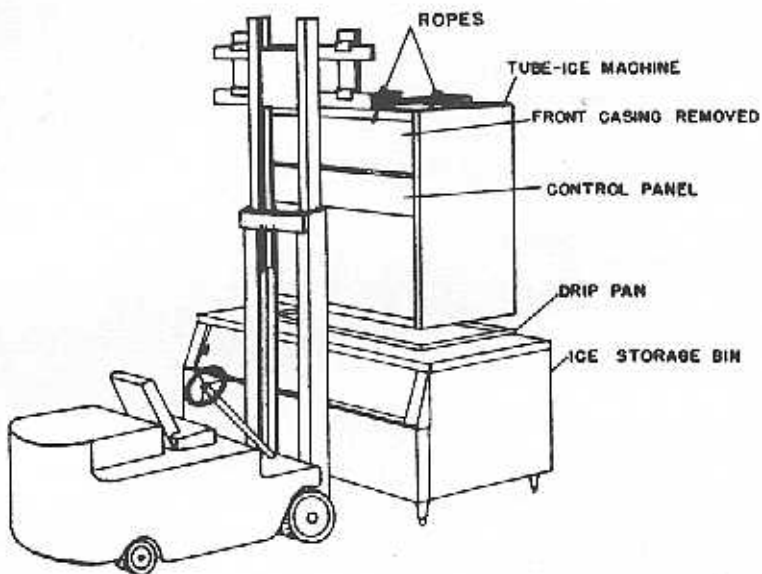


FIGURE 3

C. Method "C" requires the following materials:

- 1 - Forklift truck with adequate load and height capacities.
- 4 - Ropes to bind forks to top angles.


- 1. Set bin in proper location and level.
- 2. Position fork truck so that forks are resting flat on top angles of Tube-Ice Machine.
- 3. Using the rope, securely bind forks to the top angles.
- 4. Set Tube-Ice Machine into drip pan of bin.
- 5. Remove rope and fork truck.

D. In top diagonal corners of the machine we have provided holes for attaching lifting devices when a crane or other overhead lifts can be used.

- IV. Connect water supply lines (see drawing E-48506 attached).
 - A. 3/8" I.P.S. make-up water inlet.
 - B. 1/2" I.P.S. condenser water inlet. (Water cooled units only)
- V. Connect drain lines (see page for location).
 - A. 1/2" I.P.S. water tank overflow and drain.
 - B. 1/2" I.P.S. condenser water outlet. (Water Cooled units only)
 - C. Separate lines are required to open sewer.
- VI. Connect ice bin drains (see Bin Instructions).
- VII. Install the two (2) ice bin thermostat bulbs (coiled under Control Panel with instruction tags attached) into the brackets provided in the bin.
- VIII. Connect proper electrical current.
- IX. Position Air-Cooled Condenser at the proper location. (Air-Cooled Units only)
- X. Connect discharge and liquid return lines between the machine and the condenser. (Air-Cooled Units only)
- XI. Apply adequate vacuum on condenser and interconnecting piping to effect proper dehydration. (Air-Cooled Units only)
- XII. Connect electrical wiring to condenser as required. (Air-Cooled Units only)
- XIII. Position remote panel and connect wiring to machine control panel (Remote Control Units Only)
- XIV. Refer to Page 13 for start-up procedure.

REVISION RECORD			
NO.	DATE	FROM	TO
1	A	3-3-76	REDRAWN


MODEL 1200	MODEL 1400	MODEL 1600	MODEL 2000	MODEL 2500	MODEL 3000	MODEL 4000
1	1	1	1	1	1	1
2	2	2	2	2	2	2
3	3	3	3	3	3	3
4	4	4	4	4	4	4
5	5	5	5	5	5	5
6	6	6	6	6	6	6
7	7	7	7	7	7	7
8	8	8	8	8	8	8
9	9	9	9	9	9	9
10	10	10	10	10	10	10
11	11	11	11	11	11	11
12	12	12	12	12	12	12
13	13	13	13	13	13	13
14	14	14	14	14	14	14
15	15	15	15	15	15	15
16	16	16	16	16	16	16
17	17	17	17	17	17	17
18	18	18	18	18	18	18
19	19	19	19	19	19	19
20	20	20	20	20	20	20

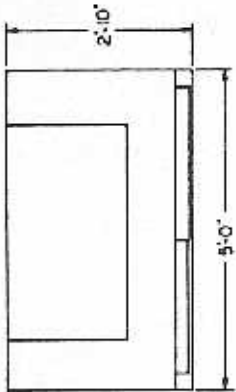

PLAN


ELECTRICAL NOTE:
FUSED SWITCH BOX OR BOXES
AND ALL WIRING TO BE MOUNTED ON WALL NEAR
TUBE ICE MACHINE.

PLUMBING NOTE:
FLOOR DRAIN TO OPEN UNDER
AND SERVICER FOR CONDENSATE WATER
OUTLET & DRAINS.

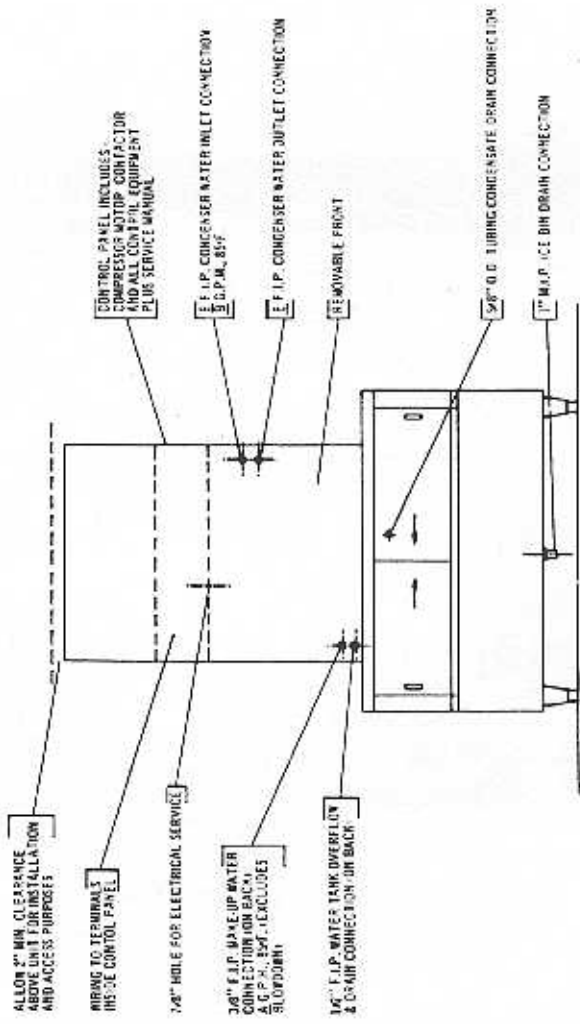

FRONT

SIDE

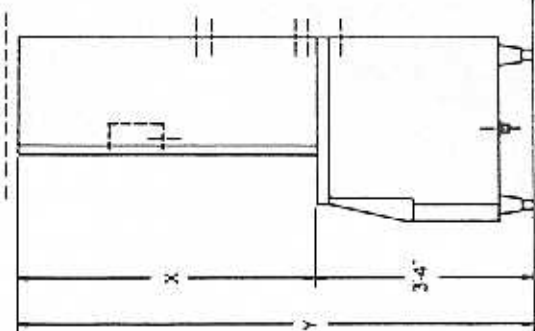

HENRY **W** **o** **r** **t** **M** **A** **C** **H** **I** **N** **E** **C** **O.**
INCORPORATED

SPACE DIAGRAM
400T-TUBE ICE MACHINES
WITH
TYPICAL ICE STORAGE BIN

DRAWN BY *J. G. G.* DATE DEC. 13, 1972
CHECKED BY _____ SCALE: NONE
CHIEF ENG.


E-48506

REV. NO. 3-3-76

E-48506

WATER COOLED UNITS

REVISION RECORD			
NO.	DATE	FROM	TO

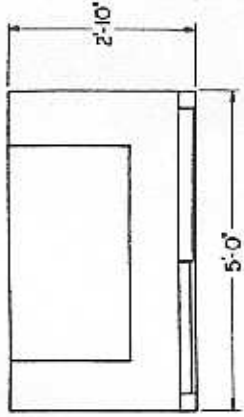


PLAN


MODEL 500	MODEL 600	MODEL 700	MODEL 800	MODEL 900	MODEL 5000
1'-6"	1'-10"	2'-0"	2'-6"	3'-0"	3'-6"
1'-10"	2'-0"	2'-6"	3'-0"	3'-6"	4'-0"
1'-10"	2'-0"	2'-6"	3'-0"	3'-6"	4'-0"
1'-10"	2'-0"	2'-6"	3'-0"	3'-6"	4'-0"
1'-10"	2'-0"	2'-6"	3'-0"	3'-6"	4'-0"
1'-10"	2'-0"	2'-6"	3'-0"	3'-6"	4'-0"
1'-10"	2'-0"	2'-6"	3'-0"	3'-6"	4'-0"
1'-10"	2'-0"	2'-6"	3'-0"	3'-6"	4'-0"
1'-10"	2'-0"	2'-6"	3'-0"	3'-6"	4'-0"
1'-10"	2'-0"	2'-6"	3'-0"	3'-6"	4'-0"

REFER TO THE FOLLOWING NOTE:
IF DISTANCE FROM TUBULE MACHINE TO 1/2" AIR-COOLED CONDENSER EXCEEDS 50 FEET CONTACT THESE ICE ENGINEERING DEPARTMENT FOR SPECIAL LINE SIZING.

ELECTRICAL NOTE:
FUSED SWITCH BOXES SHOULD BE MOUNTED ON WALL NEAR TUBULE MACHINE.

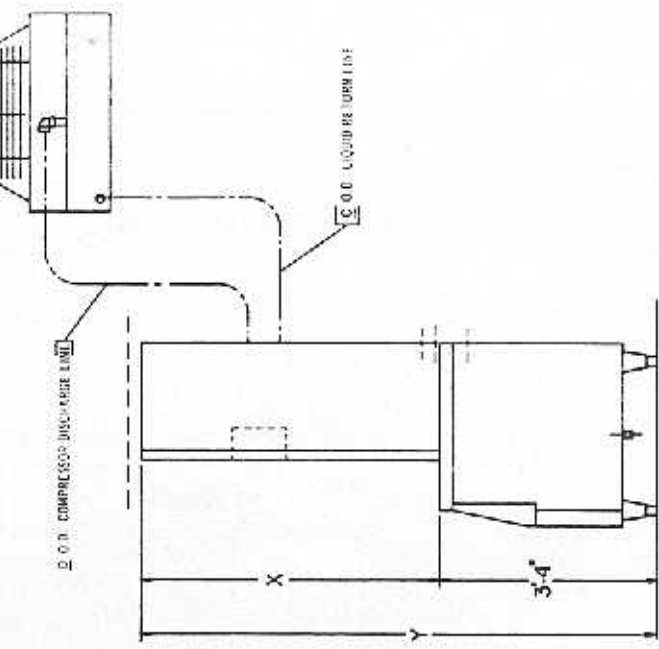

SIDE

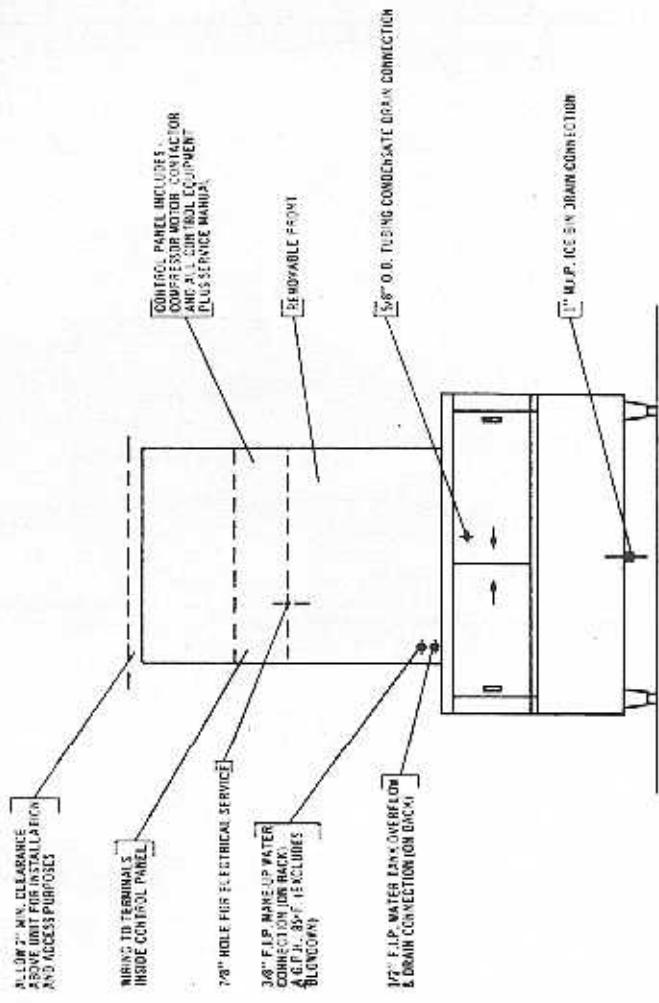

FRONT

ALLOW 2" MIN. CLEARANCE ABOVE UNIT FOR INSTALLATION AND ACCESS PURPOSES

WIRING TO TERMINALS INSIDE CONTROL PANEL

7/8" HOLE FOR ELECTRICAL SERVICE

3/8" F.I.P. MAKE UP WATER CONNECTION (ON BACK) & P.J. 3/4" EXCLUDES BLOWDOWN

1/2" F.I.P. WATER DRAIN OVERFLOW & DRAIN CONNECTION (ON CA)

CONTROL PANEL INCLUDES COMPRESSOR MOTOR, CONTACTOR AND ALL CONTROL EQUIPMENT. PLUS SERVICE MANUAL.

REMOVABLE FRONT

5/8" O.D. TUBING CONDENSATE DRAIN CONNECTION

1" I.D.P. ICE SIN DRAIN CONNECTION

O. D. O. COMPRESSOR DISCHARGE LINE

O. D. O. CONDENSER TUBING LINE

E-49659

REV. NO.

E-49659

DRAWN BY: J. G. ...
CHECKED BY: ...
DATE: MAR. 4, 56
SCALE: NOM

HENNY MACHINE CO.
 1000 W. 10TH ST.
 SPACE HEATING
 VULC. RUBBER ICE MACHINES
 WITH
 TYPICAL ICE STORAGE BIN

AIR COOLED UNITS







**VARIOUS WEIGHTS
IN LBS.**

		1500	1800	2500	3000	4000	#800 BIN
MACHINE (with R-12)	W/C	1060	1105	1270	1195	1480	325
	A/C	1070	1115	1280	1205	1490	--
CRATE	Domestic	65	65	65	65	65	75
	Export	115	115	135	115	135	205
R-12 Charge	W/C	70	70	85	70	85	--
	A/C	80	80	95	80	95	--
OPERATING WEIGHT	W/C	2275	2322	2375	2402	2710	Incl.
	A/C	2175	2222	2275	2302	2610	Incl.
CONDENSER	A/C	125	125	185	185	310	--

FIG. 15


NOTE:

Installations with remote air cooled condensers require an additional R-12 charge. The amount to be added varies proportionately to the actual distance from the machine to the condenser. Add only enough volume to be contained in the additional liquid line.

EQUIVALENT FEET DUE TO VALVE AND FITTING FRICTION							
NOMINAL PIPE SIZE COPPER TUBE, O.D., Type "L"	1/2	1/2 5/8	3/4 7/8	1 1-1/8	1-1/4 1-3/8	1-1/2 1-5/8	2 2-1/8
Globe Valve (Open) 	14	16	22	28	36	42	57
Angle Valve (Open) 	7	9	12	15	18	21	28
Close Return Bend 	2	4	5	6	9	10	13
90° Turn Through Tee 	3	4	5	6	8	9	12
Tee (Straight Through) or Sweep Elbow 	.75	1	1.5	2	2.5	3	3.5
90° Elbow or Reducing Tee (Straight Through) 	1	2	2	3	4	4	5

The sum of the actual feet distance and the equivalent feet may not exceed 50 feet.

CONTROL PANELS

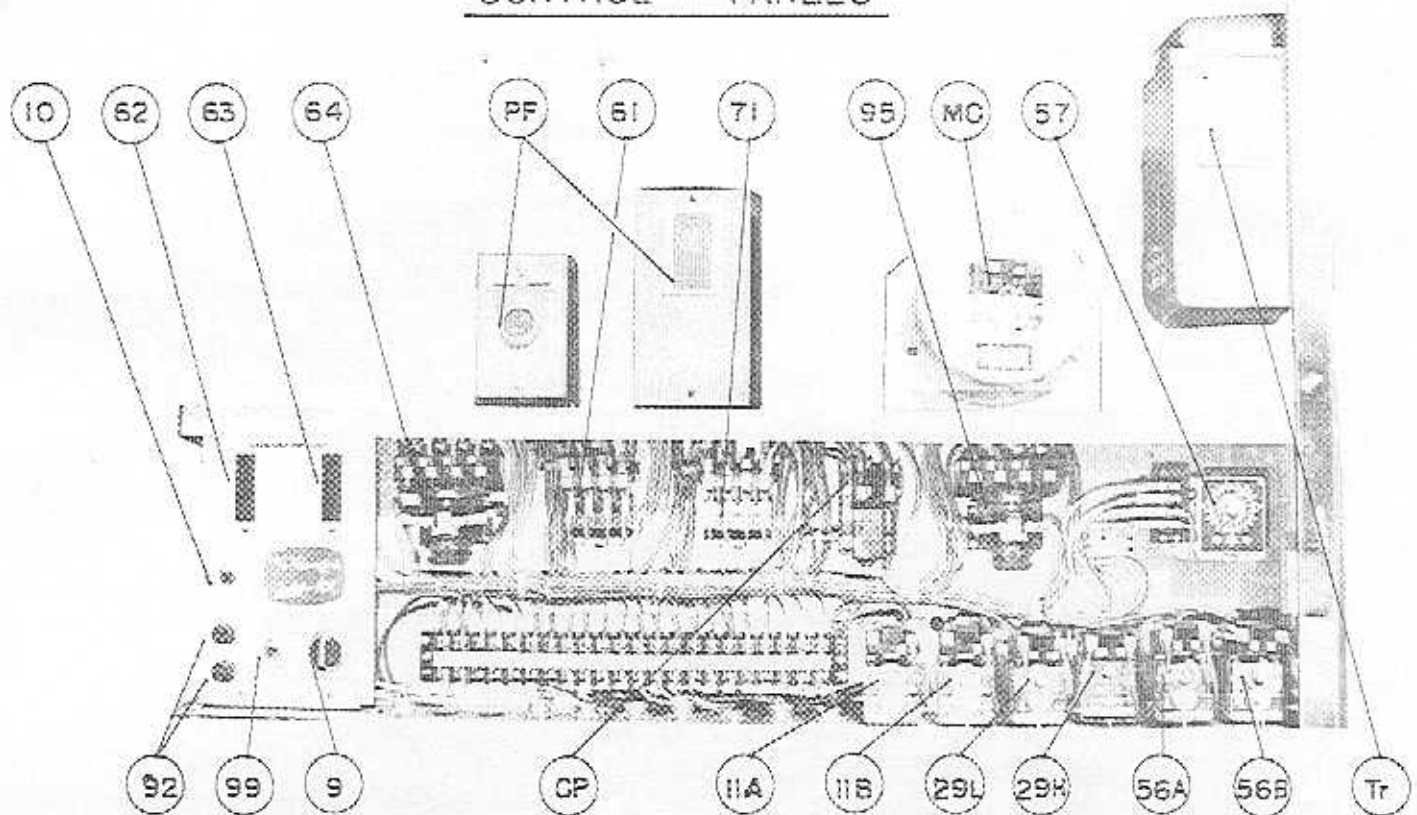

**MACHINE PANEL FOR
REMOTE CONTROLS**

REMOTE CONTROLS

FIGURE 15

- | | |
|--|---|
| <p>9) SELECTOR SWITCH FOR PRODUCTION OF EITHER CYLINDER OR CRUSHED ICE.</p> <p>10) ON-OFF/THAW TOGGLE SWITCH FOR MANUALLY STARTING, STOPPING AND THAWING MACHINE.</p> <p>11) ICE BIN THERMOSTAT, FOR AUTOMATICALLY STOPPING AND STARTING THE MACHINE FROM THE ICE LEVEL IN THE STORAGE BIN (11A - CRUSHED ICE, 11B - CYLINDER ICE.) FOR ADJUSTMENT, SEE SERVICE MANUAL.</p> <p>29) SAFETY PRESSURE SWITCHES, TO SHUT MACHINE DOWN IN THE EVENT OF UNUSUAL PRESSURE CONDITION (29L - LOW PRESSURE SWITCH, 29H - HIGH PRESSURE SWITCH.) FOR ADJUSTMENT, SEE SERVICE MANUAL.</p> <p>56) FREEZER PRESSURE SWITCH, FOR REGULATING FREEZING PERIOD (56A - CRUSHED ICE, 56B - CYLINDER ICE). FOR ADJUSTMENT, SEE SERVICE MANUAL.</p> <p>57) THAWING TIMER (T), FOR REGULATING THAWING PERIOD.</p> <p>61) RELAY (CR) FOR MAKING AND BREAKING VARIOUS CIRCUITS CONCERNED WITH FREEZING AND THAWING.</p> <p>62) CIRCUIT BREAKER (S1), FOR CUTTER MOTOR.</p> <p>63) CIRCUIT BREAKER (S2), FOR WATER PUMP MOTOR.</p> | <p>64) COMPRESSOR MOTOR CONTACTOR (C).</p> <p>71) REVERSING RELAY (R) FOR MAKING AND BREAKING VARIOUS CIRCUITS CONCERNED WITH FREEZING CYLINDER AND CRUSHED ICE.</p> <p>92) FUSES FOR COMPRESSOR CRANKCASE HEATER AND VARIOUS OPERATING COILS - BUSS AGC GLASS TYPE, 1 AMP., 250V., OR EQUAL.</p> <p>95) CONTROL CIRCUIT CONTACTOR (CC) FOR MAKING AND BREAKING CONTROL CIRCUIT.</p> <p>99) ICE-CLEAN TOGGLE SWITCH FOR MANUALLY SETTING CONTROLS FOR ICE-MAKING OR EQUIPMENT CLEANING OPERATION. SET SWITCH TO "ICE" POSITION FOR NORMAL ICE-MAKING. SEE "CLEANING PROCEDURE" FOR EQUIPMENT CLEANING INSTRUCTIONS.</p> <p>MC) MERCURY CONTROL FOR CONDENSER FAN (AIR COOLED MACHINES ONLY).</p> <p>CP) CONDENSER FAN MOTOR CONTACTOR (AIR COOLED MACHINES ONLY).</p> <p>PF) POWER FAILURE RELAY (WHEN SUPPLIED).</p> <p>TR) TRANSFORMER (WHEN REQUIRED).</p> |
|--|---|

WATER AND DRAINS

There are four water connections on the freezing unit of water cooled machines and two water connections on air-cooled machines. All connections are located at the rear of the unit and consist of the following:

On Freezing Unit (Rear Left Corner)
The 3/8" FPT connection (23A) is the water inlet for ice making.

The 1/2" FPT connection (25) is the Water Pan Drain and includes the overflow and automatic blow-down connection (40).

On Freezing Unit (Rear Right) Water Cooled Machines Only.

The lower connection (24) is the condenser water outlet.

The top connection (23) is the water inlet for the condenser. These connections are 3/4" FPT on M4000 and are 1/2" FPT on the other units.

(Exterior shutoff valves must be provided in the water inlet lines. The minimum inlet water pressure for satisfactory operation of the machine is 30 psi).

On Storage Bin - (Typical)
Top 5/8" O.D. PVC tubing connection is the condensate drain.

Bottom 1" MPT connection is bin drain.

The Condenser Water Outlet, Water Pan Drain, Condensate Drain and Ice Storage Bin Drain connection must be extended to a floor drain or sump and arranged for visible discharge. These lines must NOT be connected into a pressure tight common header due to the possibility that warm condenser water may back up into either the water pan or the Ice Storage Bin.

REFRIGERANT CHARGE

Included with the machine is the required charge of Refrigerant-12 which has been isolated in the Condenser-Receiver (#15 or 15R) (See CHART ON PAGE 10). Before shipment, the compressor service

valves #34 and #45, the Hand Stop Valve #90 in the thawing gas line, and the Hand Stop Valve #58 in the Liquid Line from the Condenser-Receiver have been closed. These four (4) valves are tagged with instructions to open valves prior to start-up of machine. Also Valve #91 in the thawing gas line of Air-Cooled Machines must be opened.

Before opening these valves it is advisable to check all joints for leaks which may have developed during shipment. If no leaks are present the "HIGH SIDE" pressure gage #36, located below the Control Panel, should indicate a pressure corresponding to the ambient temperature. If it should ever become necessary to add refrigerant to the system, charging valve #28 is provided for the purpose.

The refrigerant level should be checked after the machine has operated for a few cycles. It should be slightly above the operating level, as indicated on the Condenser-Receiver, a few minutes prior to start of a thawing period. If this level is low at this time, sufficient refrigerant should be added to the system to raise the level above this point. Add only a small quantity (5# or less) at a time and operate the machine several cycles to check the level before adding additional refrigerant.

When charging refrigerant into the unit it is important that no air or other non-condensable gases enter the system. The charging line should be purged by "cracking" the flare connection at charging valve #28 to allow a small amount of refrigerant from the refrigerant shipping cylinder to escape through the charging line. Tighten flare nut, open charging valve and charge unit as required.

When adding refrigerant to the system, it may also be necessary to add lubricating oil. See - LUBRICATION - COMPRESSOR.

In order to check the total charge in the system, it is necessary to transfer all of the refrigerant to the Condenser-Receiver. The following procedure should be followed-

1. Open electrical disconnect switch after all ice has been cleared

from freezer.

2. Remove Control Panel Cover and carefully insert a piece of paper between the contacts of the Cylinder Ice Freezer Pressure Switch #56B. This keeps controls from changing to a thawing period during the pumpdown procedure. Set the Ice Selector Switch #9 to the "CYL." Position.
3. Close the Hand Stop Valve #58 in the liquid line.
4. Start the machine and let operate until Low Pressure Switch (29L) opens, which will stop the machine.
5. Note the refrigerant level in the Condenser-Receiver. (See the chart on page 29 for proper level). If the level is low add refrigerant to bring the level up to, or slightly above the indicated point.
6. Open Disconnect Switch, remove paper from contacts of Freezer Pressure Switch and replace the Control Panel Cover. When the machine is again started, it will remain off until the pressure builds up and closes the Low Pressure Switch.

INITIAL START

1. See that water inlet-connections are attached to the proper couplings on machine-condenser water inlet coupling #23 (water-cooled units) Water for ice making #23A. The water inlet shutoff valves should be open. The water level in the water pan (7) should be at a height where the makeup water float valve will be closed.
2. See that the cutter motor gear box is lubricated (See instructions "LUBRICATION" Section).
3. See that compressor crankcase oil level is at proper height (See instructions "LUBRICATION" Section).
4. See that Circuit Breakers #62 and #63 in the Control Panel are "ON".
5. See that the "ON-OFF-THAW" toggle

switch #10 is "OFF".

6. See that the "ICE-CLEAN Toggle Switch #99 is set to "ICE" position.
7. Open compressor service valves #34 and #45, the Hand Stop Valve #90 in the thawing gas line and the Hand Stop Valve #58 in the liquid line. Also open valve #91 in the thawing gas line of air-cooled machines. These valves were tagged to indicate that they were closed for shipping purposes.
8. See that all other stop valves in the various refrigerant lines are open except charging valve (28), Drain Valve (44).
9. Close exterior disconnect switch to energize crankcase heater. (2 hrs. min.)
10. Place "ON-OFF-THAW" toggle switch #10 in "ON" position. The machine may not operate immediately until pressure raises sufficiently to close pressure switch #29L.
It may be desirable to manually open the Solenoid Valve #20 (liquid line) to admit refrigerant to the "LOW SIDE" to close switch #29L. Be sure to return the "MANUAL OPENING STEM" to the closed position (screwed-in) after the machine starts.
11. When machine starts, check water level in water pan #7 to determine whether or not water pump #6 is pumping water. It may be necessary to stop and start the machine several times to expel air from the water pump impeller housing. (Use one of the circuit breakers #62 or #63, to stop - for approximately 10 seconds - and start the machine, if necessary to prime the pump).

EXPANSION VALVE

The expansion valve (17) has been adjusted before shipment and it is RARELY necessary to alter this setting! The amount of cylinder ice and crushed ice which the machine should produce is included in the charts on page 26.

If considerably less ice is being

produced per discharge, it may be necessary to open the expansion valve by turning adjusting screw counter-clockwise 1/2 turn at a time. Allow machine to make several cycles after each adjustment. Keep in mind that it is RARELY necessary to change the factory adjusted expansion valve.

The Expansion Valve should not be opened to the extent that frost will appear on the suction line between the Heat Exchanger and the Compressor. If this part of the suction line does frost, close expansion valve as required or compressor damage will result.

FREEZER PRESSURE SWITCHES

The freezing time period for the production of cylinder ice is controlled by the freezer pressure, through one (56B) of the two freezer pressure switches located inside the Control Panel. The freezing time period for crushed ice is controlled likewise - by the second switch (56A).

These switches were set, at the factory, to produce ice of recommended thickness. A sample set of pressure readings, with corresponding time periods and water temperatures, has been recorded on the "Certificate of Test" which is furnished with the machine. Do not make any adjustments until several ice discharging cycles have been made.

A black bakelite cap, which snaps in place over the electrical contacts, may be removed to observe action of the switches (56). These pressure switches have been set so that the contacts close respectively between 15 to 20 PSIG for cylinder ice and 19 to 23 PSIG for crushed ice. The normal closing setting for the various models is shown in the chart below:

MODEL	CYL.	CRU.
1500	15	19
1800	20	23
2500	15	19
3000	20	23
4000	18	21

Each switch contact should open again at approximately 28 PSIG which pressure is produced by the entrance of thawing gas into the freezer. (NOTE - The pressure

referred to above is taken at the gauge port of the Compressor Suction Service Valve #34. Backseat the valve to install a test gauge at this point.) The range adjustment screw (which varies both the closing and opening settings) has been set at the factory so that the electrical contact opens at approximately 28 PSIG removable rubber cap has been placed over this screw indicating that the setting is not to be changed.

To vary the thickness of ice, when and if required, turn the "Differential Adjustment Screw" counter-clockwise for thicker ice and clockwise for thinner ice. Turning the "Differential Adjustment Screw" counter-clockwise rotates the "Differential Indicating Dial" clockwise, thereby lowering the closing pressure setting of the switch, resulting in the production of thicker ice. If required, make only a minor adjustment (one division or less on the "Differential Indicating Dial") and allow the unit to complete several cycles after each adjustment before making further adjustments.

The freezing time can be such that the greater percentage of the ice is frozen solid. If so, some ice from the top and bottom of the freezer, should have a small hole in the center to insure that the freezing time has not been extended to where a loss in capacity would result.

It is preferable that the freezing cycle be such that a small diameter hole remain in the center of the ice cylinder. (1/16" dia. for M1800, M3000 and M4000 3/16" dia. for M1500 and M2500). This insures that the freezing cycle is not extended unnecessarily and eliminates a possible core in the center of the ice.


When crushed ice is produced, the freezer pressure switch (56A) should be set to produce ice having a wall thickness of approximately 3/16"-1/4".

The following procedure is recommended for initially setting a freezer pressure switch which has not been previously adjusted.

1. Set "Cut-Out" pressure (contact opens) for approximately 28PSIG. Turning "Range Adjustment Screw"

clockwise raises both the "Cut-In" and "Cut-Out" pressures approximately 3.6 PSIG for each turn - one turn is approximately one-fourth of a scale division. The "Movable-Pointer" will be set approximately in the center of the scale as illustrated.

2. Set "Cut-In" pressures (contact closes) for cylinder ice production for approximately 15 PSIG (18 PSIG on M4000) and for crushed ice production for approximately 19PSIG(21 PSIG on M4000). Turning "Differential Adjustment Screw" counter-clockwise rotates the "Differential Indicating Dial" clockwise and lowers the cut-in pressure, thus producing thicker ice. One division of the "Differential Indicating Dial" represents approximately 2 PSIG.

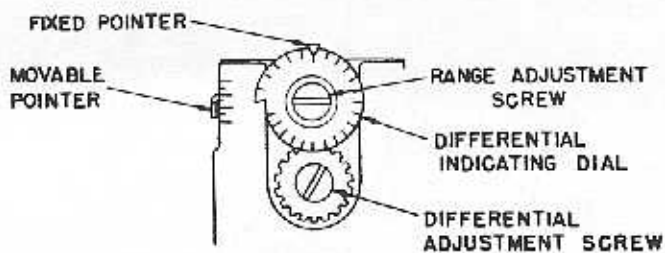

FREEZER PRESSURE SWITCH
FIGURE 6

SAFETY PRESSURE SWITCHES

The safety pressure switches (29) located inside the Control Panel protect the machine from abnormal pressure during operation and thus prevent possible damage to the unit.

The "Low Pressure Switch" (29L) will stop the machine if the suction pressure of the compressor drops below 10 PSIG and will start it again when this pressure rises to approximately 30 PSIG. Refer to instructions below for initially setting a Low Pressure Switch if it should be necessary to set a switch that has not been previously adjusted or to make any change in the factory setting.


The "High Pressure Switch" (29L) will stop the machine if the discharge

pressure of the compressor rises above 180 PSIG. The cut-out pressure setting was set at the factory and the adjusting screw "locked" in position. Refer to instructions below for initially setting a high pressure switch if it should be necessary to set a switch that has not been previously adjusted or to make any change in the factory setting. (NOTE- the locking pin must be removed before factory setting can be changed).

These switches have been set at the factory and a removable rubber cap placed over the adjusting screws to indicate that no further adjustment should be necessary.

The following procedure should be followed for initially setting a Low Pressure Switch which has not been previously adjusted:

1. Set "Cut-In" pressure (contact closes) for approximately 30 PSI by turning the "Range Adjustment Screw". One turn of this screw varies both "Cut-In" and "Cut-Out" pressure settings approximately 4 PSIG. To lower both settings, turn the screw in a counter-clockwise direction.
2. Set "Cut-Out" pressure (contact opens) for approximately 10 PSI. To lower the "Cut-Out" pressure only, turn the "Differential Adjustment Screw" counter-clockwise which will rotate the "Differential Indicating Dial" clockwise. One division of the "Differential Indicating Dial" changes the "Cut-Out" pressure approximately 2 PSIG.

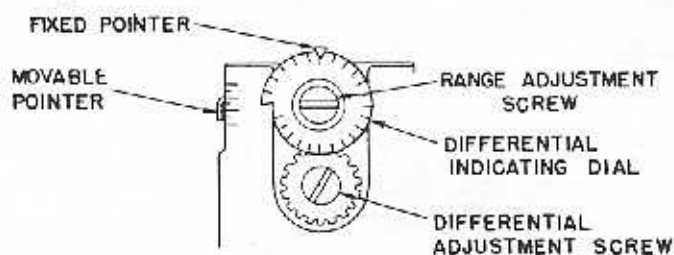

— LOW PRESSURE SWITCH —
FIGURE 7

The following procedure should be followed for initially setting a high pressure switch which has not been previously adjusted.

Set "Cut-Out" pressure (contact opens) for approximately 180 PSIG. To lower the "Cut-In" and "Cut-Out" pressure, turn the Range adjustment screw counter-clockwise. One-fourth turn of the screw changes both pressures approximately 10 PSIG.

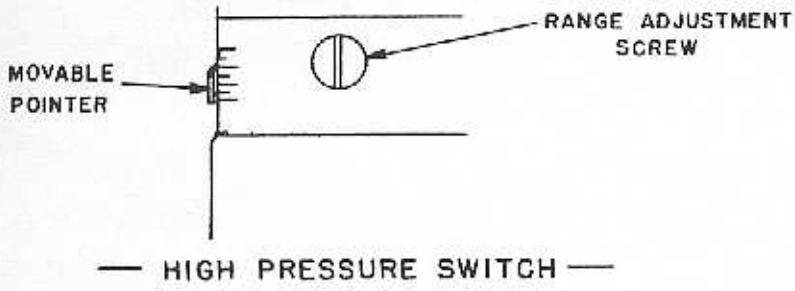


FIGURE 8

ICE BIN THERMOSTATS

The two ice bin thermostats (11) are mounted in the Control Panel and their action will stop the machine (upon completion of the thawing period) when the storage bin is filled with ice and will automatically start it again when the ice is removed from the bin. When both cylinder and crushed ice are produced and separately stored, install the control bulb of thermostat #11A in the crushed ice section of the storage bin and the control bulb of thermostat #11B in the cylinder ice section.


When only one type of ice is produced (cylinder or crushed), either the control bulb of each bin thermostat must be installed in a bracket, positioned so that ice will contact both bulbs when the bin is full or the wiring revised for one thermostat control as per detail shown in the schematic wiring diagram.

The control bulb of the ice bin thermostat must be located so that ice will contact it, when the bin is full (See Pg. 54), to assure proper protection for the machine. The control bulb when placed in the bin, should be positioned so as to allow space for the machine to make an additional discharge of ice (after the ice contacts the bulb) without the ice building up into the discharge opening of chute. The Control Panel is


electrically arranged so that the bin thermostats will stop the machine only upon the completion of a discharge period.

The ice bin thermostats are set prior to shipment; however, a minor adjustment may be required due to local conditions after installation. The following procedure should be followed for initially setting or making adjustments to the ice bin thermostat.

1. Turn "Differential Adjustment Screw" clockwise until fixed pointer is at valley of "Differential Indicating Dial".
2. With bulb covered with ice, turn "Temperature Adjustment Screw" counter-clockwise until contacts on top of thermostat (between back and front right terminal) close.
3. Then turn "Temperature Adjustment Screw" in opposite (clockwise) direction, slowly, until the said contacts just open. Then continue turning screw in same direction 2 complete turns.
4. Remove ice from bulb. Warm bulb by holding in hand until contacts close. Turn "Differential Adjustment Screw" counter-clockwise until "Fixed Pointer" is at high part of dial.
5. Then, with bulb again covered with ice, turn "Differential Adjustment Screw", clockwise, slowly, until contacts just open. Continue same direction, two (2) additional divisions of cam dial.
6. Check the temperature around the bulb to assure that contacts close at 42-44°F.

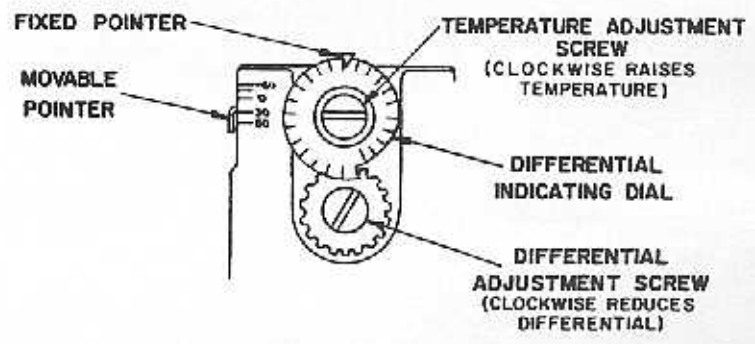

ICE BIN THERMOSTAT
FIGURE 9

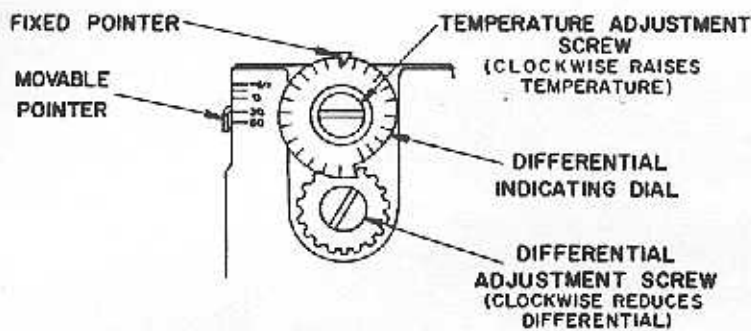

ICE BIN THERMOSTAT
FIGURE 9 (Repeated)

To raise the temperature setting at which the machine will start up, turn "Temperature Adjustment Screw" clockwise. This means that more ice will have to be removed from the bin before the machine will start. NOTE - This adjustment will also raise the shut-off temperature which means that the machine will shut off with a lower ice level in the bin.

To raise only the temperature setting at which the machine will shut off, turn "Differential Adjustment Screw" clockwise. This rotates the "Differential Indicating Dial" counter-clockwise. Change setting only one division of the dial at a time.

THAWING TIMER

The thawing timer (57) which governs the ice discharging period is located inside the control panel and is started by action of one or the other of the Freezer Pressure Switches (56). This timer is set for a 3 minute (or otherwise labeled) period prior to shipment.

The thawing period should be set for at least 30 seconds longer than the time required to harvest the entire discharge of ice. If it should become necessary to change the setting of the timer, move the time indicating pointer "STOP" by hand to the required setting.

ICE SELECTOR SWITCH

The control panel is provided with a 3-position rotary type selector switch by means of which operation of the machine may be controlled to produce (and store) cylinder and crushed ice consecutively, or to produce continuously either type of ice exclusively. The switch positions are identified by the marking "CRU-AUTO-CYL".

DESCRIPTION OF OPERATION WITH ICE SEPARATELY STORED

If the selector switch is placed on "AUTO", the machine will produce automatically cylinder ice until that (cylinder ice) bin is filled, which action will open the thermostat switch (in the cylinder ice bin) and (again automatically) change the machine over to crushed ice production PROVIDED the crushed ice bin is not full and its thermostat switch therefore exposed (and consequently closed). When the crushed ice bin is filled, its thermostat switch opens and stops the machine upon completion of the thawing period.

If, however, CYLINDER ice is removed, at any time during the freezing period of the crushed ice operation, and the cylinder ice bin thermostat switch closes, the machine will REVERT IMMEDIATELY TO CYLINDER ICE PRODUCTION and will continue so until that bin is again full, at which time the change to CRUSHED ICE will again occur.

If when producing CYLINDER ICE, the thermostat switch (in the cylinder ice bin should open (by contact with ice in any manner), the machine will complete one cylinder ice operation before (automatically) changing to crushed ice. If the selector switch should be changed to crushed (CRU) during cylinder ice production, the same procedure will occur.

The machine will never stop during any freezing operation - it will always complete the evacuation and discharge all of the ice regardless of the causes which open either thermostat switch.

DESCRIPTION OF OPERATION WITH ICE NOT SEPARATELY STORED

With the selector switch set on either "AUTO" or "CYL", the machine will produce cylinder ice until the bin is filled (and the two thermostat switches open) and will shut down at the completion of the thawing period.

If the selector switch is changed to "CRU", after the unit has started a cylinder ice freeze, the unit will complete the freeze and evacuation of the cylinder ice before changing to the production of crushed ice.

With the selector switch set on "CRU" the machine will produce crushed ice until the bin is filled (and the two thermostat switches open). It will then shut down at the completion of the thawing period. If the switch is change to "AUTO" or "CYL" after the machine has started a crushed ice freeze, it will revert immediately to the production of cylinder ice.

DESCRIPTION OF OPERATION WHEN ICE BIN THERMOSTATS ARE NOT USED

With the selector switch set on either "AUTO" or "CYL", the machine will produce cylinder ice. If the switch is changed to "CRU" while the unit is producing cylinder ice, it will complete the freeze and evacuation of the cylinder ice before changing to the production of crushed ice.

With the switch set on "CRU" the machine will produce crushed ice. If the switch is changed to "AUTO" or "CYL" the unit will revert immediately to the production of cylinder ice.

ADJUSTABLE BLOWDOWN (During Freezing)

A pet cock is installed on the water pump to provide means for obtaining blowdown from the water pan during the freezing period. This supplements the blowdown that is discharged during the thawing period through the overflow piping connected to the drain of the water pan.

The pet cock was set at the factory to discharge approximately one (1) gallon of water in fifteen (15) minutes. After installation it should be adjusted to the minimum rate required to maintain production of quality ice.

AUTOMATIC BLOWDOWN (During Thawing)

A patented feature of this machine is the automatic blowdown (40) which is provided to eliminate or reduce the necessity for frequent flushing or cleaning of the water pan (7) to remove accumulated salts or solids in the water as a result of the freezing action.

A principle of operation of the blowdown arrangement is a syphoning effect which is initiated during each

thawing period when the water pump is stopped and the water in the freezer tubes returns to the water pan, thereby raising the water level and causing a portion of the water to overflow from the bottom of the pan.

The water level (controlled by the Float Valve #12) regulates the quantity of "overflow" during the thawing period.

FLOAT VALVE (Makeup Water)

The makeup water float valve (12) maintains the proper pumping level in the water pan for ice making. The valve should be set to maintain a water level in the water pan during the freezing period, so that there will be a quantity of "overflow" or blowdown only during the thawing period. The water level during the freezing period should always be below the "overflow" connection to prevent excessive waste of cold water, resulting in loss of ice capacity.

If it should become necessary to clean the float valve, close the stop valve in the makeup water line to the machine and remove float valve. After valve has been cleaned and reinstalled, check to ascertain if the proper water level is being maintained.

It is advisable to install a large area strainer in the water supply line if there is any amount of dirt or solids in the water which would necessitate frequent cleaning of the float valve. A strainer of 40 mesh screen is usually satisfactory.

CONDENSER WATER REGULATOR

Water-Cooled Units

The condenser water regulating valve (41) should be set to maintain a condensing pressure of approximately 120 PSIG during the freezing period. The condenser pressure gage (36) is located beneath the control panel near the front right hand side of the machine.

If it should be necessary to adjust the regulating valve to obtain the correct condensing pressure of 120 PSIG during the freezing period, turn adjusting cover clockwise to increase the pressure and counter-clockwise to decrease the pressure. When making adjustments, allow the regulator suffi-

cient time to adjust itself to the new setting.

CONDENSER PRESSURE REGULATOR - Air-Cooled Units

The condenser pressure should be maintained at approximately 120 PSIG during the freezing period. The condenser pressure gage (36) is located beneath the control panel near the front right hand side of the machine.

A Mercoïd Pressure Switch is used to regulate the condenser pressure by controlling the operation of the fan motor of the air-cooled condenser. The switch is set to start the fan motor when the condenser pressure rises to approximately 126 PSIG and will stop it when the pressure drops to approximately 114 PSIG.

COMPRESSOR CRANKCASE HEATER

An electric crankcase heater is installed on the compressor to reduce refrigerant migration to the crankcase during off periods. Accumulation of liquid refrigerant in the compressor crankcase causes slugging and loss of oil during start-ups.

The machine is wired so that the heater is energized when electrical current is supplied to the main terminals (L1, L2 and L3) of the Control Panel. THE HEATER SHOULD BE ENERGIZED FOR AT LEAST TWO HOURS BEFORE STARTING THE MACHINE IF THERE SHOULD BE AN INTERRUPTION IN THE ELECTRICAL SERVICE TO THE MACHINE. This may be done by setting the on-off toggle switch to the "OFF" position.

The compressor crankcase heater and the various electrical control equipment, such as relays, coils, timer, etc., are protected by two (2) fuses located in the control panel. Buss AGC, glass type, 1 amp., 250 volt fuses, or equal, are recommended for this service.

SERVICE OPERATIONS

CONDENSER CLEANING (Water Cooled Units)

The water coil or tubing in the condenser may require occasional cleaning due to scale deposits of calcium or magnesium salts from the cooling water.

SHELL AND COIL CONDENSER

To clean, stop the machine. Close the stop valve in the water line to the condenser. Remove the condenser water regulating valve (41). Connect to the condenser water inlet and outlet, two lengths of 5/8" O.D. copper tubing, bent so that the open end of each extends above the condenser. Prepare a gallon of solution consisting of twenty per cent of commercial muratic (Hydrochloric) acid and eighty percent water (by volume) in an enameled bucket or earthen crock - do not use a galvanized container. When mixing, be certain to pour the acid into the water. Care should be exercised due to the injurious nature of this solution.

Fill the condenser coil with the acid solution and leave this for about thirty minutes or until the CO₂ gas involved is no longer evident. Drain out solution and immediately flush the coil with fresh water for five minutes or more.

Occasionally so-called "LIME" deposits are of such mineral content that the muratic acid solution will not dissolve them, in which case the deposits should be analyzed by competent chemists to determine the proper cleaning solution to remove the deposit and still not be detrimental to the copper coil. The local water supply company may be able to provide the necessary information.

If, after cleaning the condenser coil, the condensing pressure continues to be abnormally high, other sources of trouble should be investigated. See "SYMPTOMS AND PROCEDURES."

AIR-COOLED CONDENSER

Visual inspection will indicate if dirt is accumulating and clogging the fin face of the condenser. A vacuum cleaner, compressor air or a brush may be used to remove any accumulation of dirt from the fin section of the condenser.

CUTTER

PARTIAL SECTION SHOWING PARTS AND THEIR ARRANGEMENT

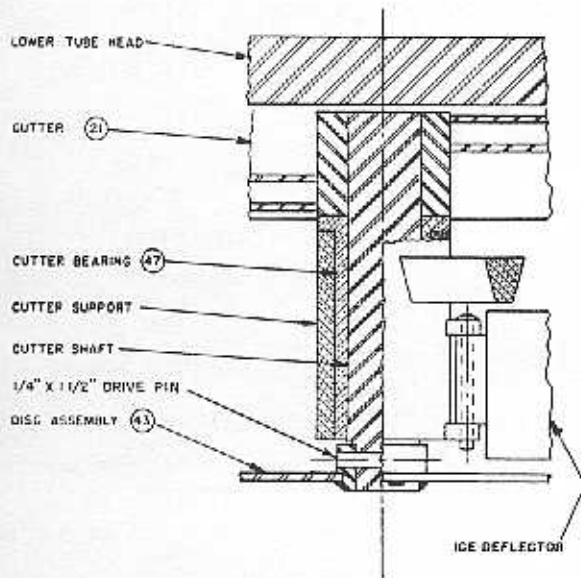


FIGURE 10

CUTTER AND GEAR DRIVE

To remove the ice cutter (21) when and if necessary, proceed as follows -

Stop the machine. Close stop valve in Makeup Water Line to water pan.

Disconnect the Makeup Water Line and drain line at the water pan.

Separate motor from the cutter drive reducer by removing four (4) cap screws. Watch for shaft key when separating unit which must be installed in motor keyway when unit is re-assembled. It is not necessary to remove the reducer from its mounting plate of the water pan.

Remove the water pump which is attached to the base angle by two (2) bolts and nuts. Remove ice discharge chute which is attached to the water pan by four (4) hex nuts.

Remove the water pan, which contains the Cutter, by removing nut from the three (3) studs welded to the top edge of the pan. Assembly may then be taken to a work bench for removal of cutter, which is held in place by three 1/4" cap screws holding cutter support to side of the water pan. Before loosening these cap screws, remove the ice deflector and the cutter disc assembly. (Pg. 51)

If a new bearing is required, it should be pressed into the bearing support after removing old bearing. When the new bearing is in place it must be drilled (3/16" Dia.) to receive the locking pin. Do not insert the pin beyond the inner surface of the bearing.

The parts should be re-assembled, reversing the procedure described for removal.

PUMPING DOWN FREEZER

If it should become necessary to pump the refrigerant out of the freezer only, sufficient vapor should be retained to hold one pound pressure in the freezer so that air will not enter if the system is opened.

The following procedure should be followed to pump the refrigerant out of the freezer -

1. Open electrical disconnect switch after all ice has been cleared from freezer.
2. Remove control panel cover and carefully insert a piece of paper between the contacts of the cylinder ice freezer pressure switch #56B. This keeps controls from changing to a thawing period during the pumpdown procedure. Set the Ice Selector Switch #9 to the "CYL" position.
3. Close the Hand Stop Valve #58 in the liquid line.
4. Start the machine and let operate until Low Pressure Switch (#29L) opens, which will stop the machine. Warm water in the pumping tank will assure complete removal of refrigerant from the freezer.

The Low Pressure Switch will open at approximately 10 PSI. To then reduce the freezer pressure below this setting, connect a jumper across the switch terminals and control the starting and stopping of the compressor with either circuit breaker #62 or #63 located in the upper left-hand corner of the control panel.

After pumping out the freezer, close

the Compressor Service Valves #34 and #45 and the Hand Stop Valve #90 in the Thawing Gas Line. This will confine the refrigerant charge to the Condenser-Receiver the same as when the machine was originally shipped.

REMOVAL OF REFRIGERANT FROM MACHINE

To transfer the refrigerant charge from the machine into a separate container, proceed as instructed above under "PUMPING DOWN FREEZER". This will isolate the refrigerant in the Condenser-Receiver.

Then connect a length of 1/4" O.D. copper tubing or a charging hose to Condenser-Receiver Drain Valve #44. The tubing or hose should be long enough to reach to the floor to connect to a storage container. Purge tubing or hose of air by allowing a small amount of refrigerant to escape.

Pack the storage container in ice and be sure that the container has a storage capacity in excess of the amount (weight) of refrigerant in the system. Open the Condenser-Receiver Drain Valve and the Storage Container Valve. When the pressure in the Condenser-Receiver is reduced to approximately 30 PSI, close the drain valve (44). It may be necessary to apply heat to the lower portion of the Condenser Receiver to assist in removing the refrigerant. Close storage container valve.

REFRIGERANT LEAKS

In addition to testing the machine for leaks as instructed under "Refrigerant Charge", it is advisable to again make a leak test after the unit has been in operation approximately one week. Any noticeable change in operating conditions, other than shown on the "Certificate of Test" may indicate a loss of refrigerant due to a leak. Always release the refrigerant pressure from the vessel or tubing before repairing leak.

NON-CONDENSIBLE GASES

Satisfactory operation of the machine is not possible if non-condensibles gases (usually air) are present in the system. Excessive condensing pressure is an indication of such gases. Excessive condensing pressure in water cooled condensers may also be due to the accumulation of scale in the cooling

coil, or due to insufficient cooling water or excessive water temperature.

Non-condensibles gases may be purged from the condenser-receiver by "cracking" the flare nut at the condenser pressure gage (36). Purging should be done after the machine has been shut down for several hours. Purging water cooled machines may begin when the condenser reaches room temperature. Purging should be done intermittently by loosening and tightening the flare nut at the pressure gage. Intermittent purging prevents the excessive loss of refrigerant.

COMPRESSOR MOTOR BURNOUT

There are several causes of compressor motor burnout. Several of these are described below.

1. Low Line Voltage - A Compressor Motor is designed to operate within the range of plus or minus 10% of its nameplate voltage. Low voltage requires the motor windings to carry more current at the same compressor load. When this current gets too high or is applied for an extended period, the motor windings overheat, resulting in a failure or burnout.

2. Loss of Refrigerant - The hermetic compressor motor is maintained at proper operating temperature by passing the cool suction gas over the motor windings. A loss of refrigerant will cause the winding to overheat, resulting in a failure or burnout.

3. High Head Pressure - The system is designed to operate at 120 PSI. Excessive head pressure adds refrigerating load on the compressor which can cause the windings to overheat and result in a failure or burnout.

4. Moisture - Moisture in contact with refrigerant and oil in the presence of heat will form pure hydrochloric or hydrofluoric acid. The acid will destroy the insulation on the motor winding, causing a short circuit which can increase motor temperature in excess of 3000°F. This extreme temperature will also create a sludge or black residue in the system.

Whenever there is a compressor failure due to a motor burnout, it is

important that the system be thoroughly cleaned before replacing the damaged compressor, otherwise the new compressor may also be damaged.

SOLENOID VALVES

The solenoid valves (18 and 20) are pilot-operated with "floating" type diaphragm. For satisfactory operation be sure that the "Manual Opening Stem", which is located in the valve bonnet, on the outlet side of the valve, is in the "all in" or closed position.

These valves will operate on voltages within 10% of rating, but dirt or sludge will affect the operation.

WATER DISTRIBUTORS

The water distributors are located in the distributing head (8) at the top of the freezer. There are 78 distributors used in the Models 1800, 3000 and 4000; 36 distributors are used in the other units. These may require occasional or periodical cleaning to remove suspended solids and foreign particles accumulated from the make-up water. The frequency of this cleaning operation will depend on the characteristics of the water supply.

The cleaning operation is indicated when the inside diameter of a large proportion of the ice becomes irregular (due to channeling of the water), or if some of the ice is opaque, or if there is a noticeable decrease in quantity.

To clean distributors, stop the unit and remove the distributing head (8) on top of the freezer. The Water Distributors may then be removed for cleaning.

WATER PAN

The production of opaque ice usually indicates that the water in the water pan contains a concentrated amount of solids or salts.

Remove cover plate, open Drain Valve (39) and clean pan thoroughly by flushing out with a hose and scrubbing with a stiff brush.

When restarting the machine after filling the water pan, be sure that the water pump is circulating water. It is possible that air may have collected in the pump impeller housing and the unit may have to be stopped and started several times to expel the air.

CLEANING INSTRUCTIONS

ICE MAKING SECTION

The ice making section of the Tube-Ice Machine should be cleaned twice a year using Calgon Ice Machine Cleaner (a food grade liquid phosphoric acid) or equivalent. The water pump is used to circulate the cleaner through the system by setting the "ICE-CLEAN" toggle switch (99) to the "CLEAN" position and starting and stopping the pump by the "ON-OFF" toggle switch (10).

For complete instructions, refer to the "CLEANING PROCEDURE" attached to the equipment and duplicated here.

CLEANING PROCEDURE

1. Set toggle switch (10) to "OFF" position. (If the machine is running it will shut down on completion of ice harvesting period).
2. Remove ice from storage area or cover opening into it.
3. Shut off water supply and drain tank (7). Remove any loose sediment from the tank.
4. Close drain valve and fill tank with 4-1/2 gallons hot water. On units equipped with a petcock on the water pump, set the petcock to wide open position and insert the discharge end of its plastic tubing into the water tank.
5. Add 1-1/2 bottles (approximately 18 oz.) of Calgon Ice Machine Cleaner (a food grade liquid phosphoric acid) to water tank during the refill period.
6. To run pump only, set the "ICE-CLEAN" switch to the "CLEAN" position. The pump is then started and stopped by the "ON-OFF" toggle switch (10). If necessary to purge air from pump, return switch (10) to "OFF" position for a few seconds, then back to "ON" position.
7. Circulate cleaning solution for 30 minutes or until desposits are dissolved.
8. Set switch (10) to "OFF" position to stop pump, then drain and flush

water tank with fresh water. Open water supply to machine.

9. Replace petcock plastic tubing to drain connection and start pump again by setting switch (10) to "ON". Operate for 15 minutes, then stop pump by returning switch (10) to "OFF". Drain and flush tank and then refill with fresh water. Return the "ICE-CLEAN" toggle switch to the "ICE" position for normal ice making operation.
10. Clean inside of ice storage area and remove any solution that entered during the cleaning process. Remove cover if one was installed over opening into storage area.
11. Start ice making cycle by setting switch (10) to "ON" position.
12. Adjust setting of pump petcock per instructions in the service manual.

ELECTRICAL FUSES

The control circuit of the machine is protected with two (2) fuses (Buss, AGC, or equal, glass type, 1 amp., 250 volt.)

If one of the fuses should open, the machine will immediately stop. Before replacing the fuse, open the disconnect switch and set the on-off toggle switch to the "OFF" position. If the machine was off for a period of several hours due to fuse failure, refrigerant may have condensed in the crankcase of the compressor. If this condition occurs, the crankcase heater should be energized for a time period of at least one hour before again turning the toggle switch to the "ON" position to start the machine.

Should one of the fuses open while there is still ice in the freezer, the ice should be cleared before resuming operation. This may be done by depressing the on-off-manual harvest switch (10) to the "Manual Harvest" position then immediately back to the "ON" position. (IF the switch is left in the "OFF" position, it will shut down upon completion of the harvest period). After all ice is discharged the machine may be returned to a freezing period by stopping and starting it again by use of either of the circuit breakers, 62 or 63, in the control panel - or the machine will automatically return to the freezing period upon completion of the

time setting of the thawing timer.

LUBRICATION

COMPRESSOR

In starting and charging the unit the oil Sight Glass (33) in the crankcase of the compressor should be watched carefully for the first hour to make certain the proper lubrication is being maintained. The compressor oil pressure relief valve line is directed to discharge oil against the bull's eye. If oil is discharged from the relief valve, pressure is adequate. When oil does not discharge from this line, it may be an indication of low oil charge. (The oil may become low in the crankcase on an initial startup, after a prolonged shutdown period, if the electrical current is interrupted to the machine, thus de-energizing the compressor crankcase heater. Before starting the machine again, the heater should be energized for a time period of at least one hour, to evaporate refrigerant that may have condensed in the crankcase during the shutdown period. If level is low after startup, it should begin to return after a short period of operation.)

The oil level should be checked frequently, particularly during the startup operation, to see that a sufficient amount of oil remains in the crankcase. While it is important to observe the oil splash during operation, the true level can be obtained only after operating the compressor at least one hour, after which it should be stopped by opening either switch #62 or the Exterior Disconnect Switch. With the compressor idle, the oil level should be at a height of 1/3 to 2/3 of the sight glass, but not out of sight above it.

Although the machine was shipped with the oil charge which was originally added for the test operation, it may be found necessary to add some oil when or if new refrigerant is added to the system.

An oil pump should be used to force any oil that may be required into the system. Oil may be added to the compressor through the gauge port of the compressor suction service valve. The Compressor Suction Service Valve should be "backseated" to shut off pressure to the gauge port when connecting the oil pump. Air should be purged from the oil pump

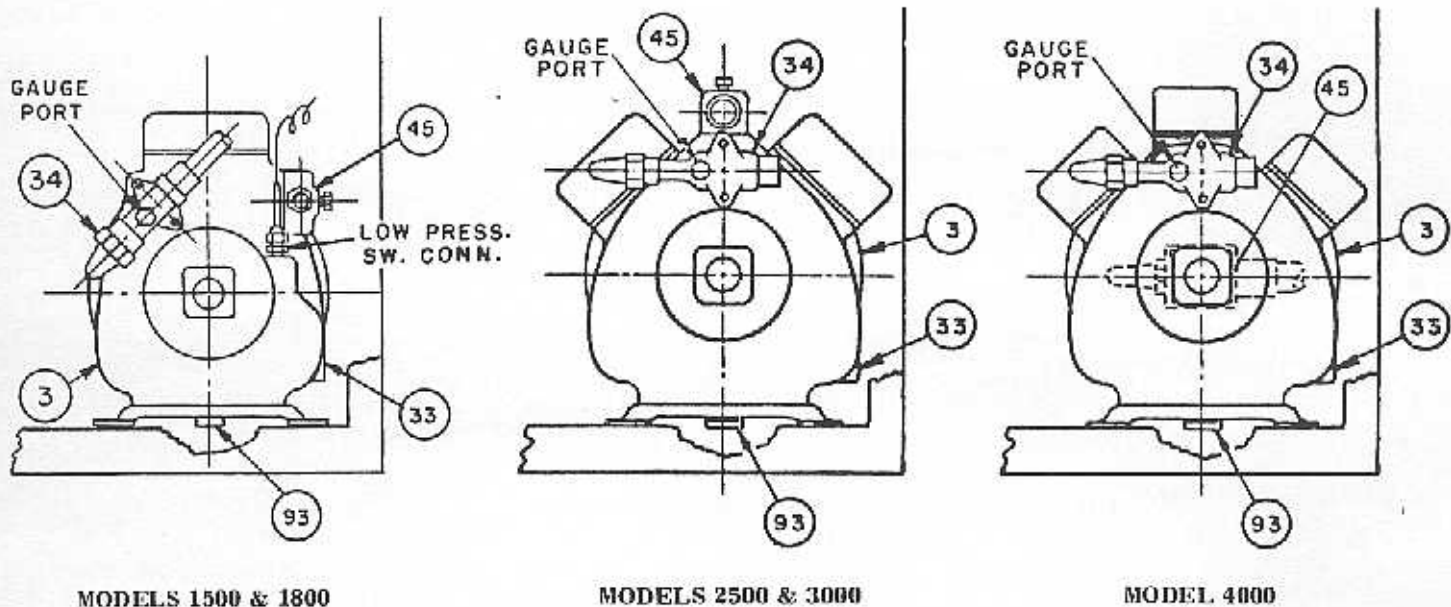


FIGURE 11

discharge line, by forcing some oil through the line before tightening the charging connection.

Use "Dual Inhibited Sunisco 3GS" (Viscosity 150), as manufactured by Sun Oil Company, or equal.

CUTTER GEAR MOTOR

The reducer manufactured by Bond is pre-lubricated with a special synthetic lubricant. Do no change or add any other lubricant or oil.

The oil level for any other make reducer should be checked before starting the machine. It should be level with the plugged opening in the side of the gear housing. Use Mobile 600W cylinder oil or equal. Change oil once a year.

The motor bearings are pre-lubricated and require no further lubrication. For additional information, refer to manufacturer's instructions.

CUTTER BEARING

The cutter bearing is of the sleeve type and is made of Rulon, requiring no lubrication. If necessary to replace this bearing, follow instructions under heading "Cutter and Gear Drive".

CIRCULATING WATER PUMP MOTOR

The motor bearings are pre-lubricated and require no further lubrication for two years. Pump should operate with the water level above the impeller housing. Refer to manufacturer's instructions.

The pump is equipped with a mechanical seal which is self-adjusting and requires no lubrication. However, the pump should not be operated unless circulating water. The pump manufacturer recommends that a spare mechanical seal be kept as a spare. When ordering a seal, specify pump size, type, serial number and manufacturer's name as indicated on the nameplate.


TYPICAL WIRING DIAGRAMS

ELECTRICAL (FUSED) SERVICE CONNECTIONS DIAGRAM




See Table A

DIAGRAM 2

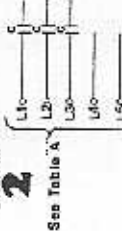


See Table A




See Table A


DIAGRAM 4

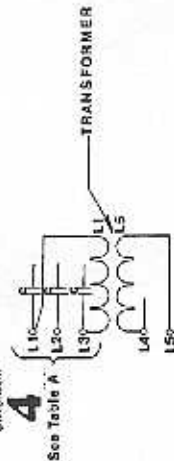

See Table A

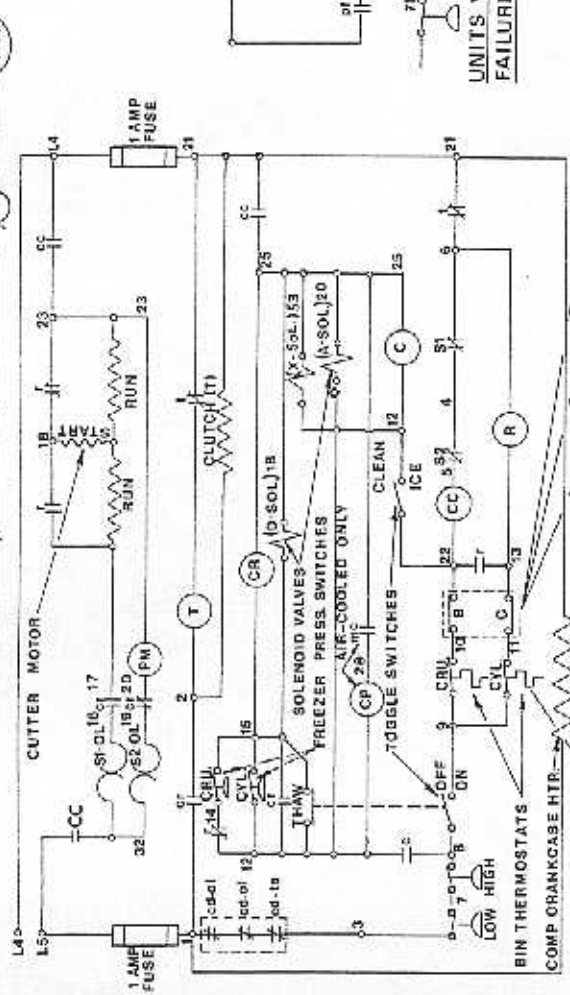


DETAIL FOR ONE THERMOSTAT WIRING (CYL OR CRU)

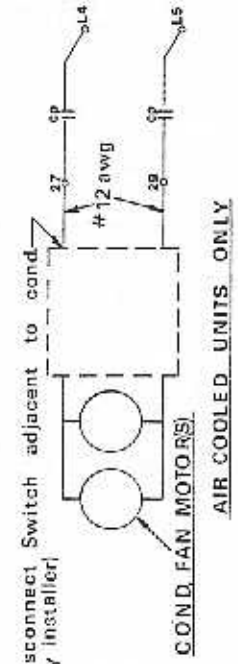

Disconnect Switch adjacent to cond. (by installer)

COND. FAN MOTOR(S)

AIR COOLED UNITS ONLY



UNITS WITH POWER FAILURE FEATURE

Symbol	Part
C	Comp. Motor, Contactor
CR	Control Relay
T	Thawing Timer
S1	Overload Switch for Compressor Motor
S2	Overload Switch for Pump Motor
CD	Internal Protection for Compressor Motor
R	Reversing Relay
CC	Control Circuit Contactor
MC	Mitsubishi Control
CP	Contact for Condenser Fan Motor
PF	Power Failure Relay
SC	Start Capacitor
PR	Potential Relay
RC	Run Capacitor
PM	Pump Motor

ELECTRICAL DATA - COMPRESSOR

SERIES 1500 & 1800				SERIES 2500 & 3000							
MODEL	COMPRESSOR	VOLTAGE	RLA	MODEL	COMPRESSOR	VOLTAGE	RLA				
B1CA2368B	06DR1090GA0400	200 RANGE, 180-230	8.8	B2CA2368	06DA0160FA0400	200 RANGE, 180-230	12.6				
B1CA2368BAC				B2CA2368AC			13.2				
A18CA2368				A30CA2368			12.6				
A18CA2368AC				A30CA2368AC			13.2				
D1CA2368	06DR1090GA0500	230 RANGE, 198-264	7.6	C2CA2368	06DR3160FA0410		18.1				
D1CA2368AC				C2CA2368AC			19.0				
A18CA236				B30CA2368			18.1				
A18CA236AC				B2CA2368AC			19.0				
B1CA2350	06DR1090BA0500	200 RANGE, 165-220	7.6	D2CA236	06DA0160FA0500	230 RANGE, 198-264	11.8				
B1CA2350AC				D2CA236AC							
A18CA2350				A30CA236							
A18CA2350AC				A30CA236AC							
D1CA4368	06DR1090GA0600	460 RANGE, 414-529	3.8	E2CA236	06DR3160FA0510		16.4				
D1CA4368AC				E2CA236AC				17.2			
A18CA436				B30CA236				16.4			
A18CA436AC				B30CA236AC				17.2			
D1CA436BT				06DA0160FA0500				B2CA2350	06DR3160FA0510	200 RANGE, 165-200	11.8
D1CA436BACT								B2CA2350AC			
A18CA436T								A30CA2350			
A18CA436ACT								A30CA2350AC			
D1CA335B	06DR1090BA0600	400 RANGE, 342-457	3.8	C2CA2350	06DR3160FA0510		16.4				
D1CA335BAC				C2CA2350AC				17.2			
A18CA335				B30CA2350				16.4			
A18CA335AC				B30CA2350AC				17.2			
D1CA2358	06DR1090GA0800	230 RANGE, 198-264	6.4	D2CA436	06DA0160FA0600		4.0				
D1CA2358AC				D2CA436AC							
A18CA235				A30CA436							
A18CA235AC				A30CA436AC							
B1CA216B	06DR1090GA0300	230 RANGE, 198-264	12.5	D2CA436T	06DA0160FA0900	460 RANGE, 414-529	7.6				
B1CA216BAC				D2CA436ACT				8.0			
A18CA216				A30CA436T				7.6			
A18CA216AC				A30CA436ACT				8.0			
SERIES 4000				E2CA436	06DR3160FA0610		7.6				
A40CA2368	06DR7240DA0400	200 RANGE, 180-230	20.5	E2CA436AC				06DR3160FA0610		8.0	
A40CA2368AC				B30CA436							7.6
A40CA236	06DR7240DA0500	230 RANGE, 198-264	21.0	B30CA436AC				06DR3160FA0610		8.0	
A40CA236AC				E2CA436T	7.6						
A40CA2350	06DR7240DA0500	200 RANGE, 180-230	21.0	E2CA436ACT	06DR3160FA0610		8.0				
A40CA2350AC				B30CA436T				7.6			
A40CA436	06DR7240DA0600	460 RANGE, 414-529	10.0	B30CA436ACT	06DA0160FA0900		5.9				
A40CA436AC				D2CA335							
A40CA436T				D2CA335AC							
A40CA436ACT				A30CA335							
A40CA335	06DR7240DA0600	400 RANGE, 342-457	10.0	A30CA335AC	06DR3160FA0610		7.6				
A40CA335AC				E2CA335				8.0			
A40CA235	06DR7240DA0800	230 RANGE, 198-264	17.8	E2CA335AC	06DR3160FA0610		8.0				
A40CA235AC				B30CA335				7.6			
B40CA2368	06DR7240DA1200	200 RANGE, 180-264	18.9	B30CA335AC	06DA0160FA0300		18.0				
B40CA2368AC				A2CA216							
				A2CA216AC	06DA0160FA0300		28.0				
				A30CA216							
				A30CA216AC							
				B2CA216							
				B2CA216AC	06DA3166FA0300		9.9				
				B30CA216							
				B30CA216AC	06DA0160FA0800		13.7				
				D2CA235							
				D2CA235AC							
				A30CA235							
				A30CA235AC	06DR3160FA0810		14.4				
				E2CA235							
				E2CA235AC	06DR3160FA0810		13.7				
				B30CA235							
				B30CA235AC			14.4				

CAPACITY TABLE

MODEL	WATER TEMP. ° F	POUNDS PER 24 HR.		CONDENSER WATER GPM (WATER COOLED)		KW PER 100# ICE	
		CYLINDER	CRUSHED			CYLINDER	CRUSHED
				COIL TYPE	TUBE TYPE		
M 1500	85	1200	1200	4.20	4.10	3.60	4.00
	75	1300	1300	2.10	2.10	3.50	3.90
	65	1400	1400	1.40	1.40	3.40	3.80
	55	1450	1450	1.00	1.30	3.25	3.65
M 1800	85	1350	1350	5.10	4.40	3.60	4.00
	75	1450	1450	2.50	2.30	3.50	3.90
	65	1550	1550	1.70	1.50	3.40	3.80
	55	1650	1650	1.2	1.50	3.25	3.65
M 2500	85	2050	2050	6.40	7.10	3.60	4.00
	75	2200	2200	3.20	3.70	3.50	3.90
	65	2350	2350	2.14	2.50	3.40	3.80
	55	2500	2500	1.60	2.30	3.25	3.65
M 3000	85	2350	2350	8.00	7.70	3.70	4.10
	75	2525	2525	4.00	4.00	3.50	3.90
	65	2650	2650	2.60	2.70	3.40	3.80
	55	2850	2850	2.00	2.50	3.35	3.75
M 4000	85	3200	3200	11.80	11.30	3.60	4.00
	75	3400	3400	5.90	5.90	3.50	3.90
	65	3600	3600	3.80	3.90	3.40	3.80
	55	3800	3800	3.00	3.70	3.25	3.65

FIG 13

ICE CAPACITIES BASED ON 60 HZ. OPERATING CURRENT AND AN AMBIENT TEMPERATURE NOT EXCEEDING 85° F. REDUCE CAPACITY 17% FOR 50 HZ. OPERATION.

NORMAL OPERATING VITALS

(65° to 75°)	MODEL SERIES									
	CYLINDER					CRUSHED				
	1500	1800	2500	3000	4000	1500	1800	2500	3000	4000
SUCTION PRESS. END OF FREEZE (psig)	15	20	15	20	18	19	23	19	23	21
COND. PRESS. DURING FREEZE (psig)	120	120	120	120	120	120	120	120	120	120
FREEZE TIME (min.)	45	37	33	20	18	28	28	19	13	12
SUCTION PRESS. END OF THAW (psig)	45	45	43	45	41	50	50	50	49	43
COND. PRESS. END OF THAW (psig)	59	56	53	54	55	60	59	63	64	59
ICE RELEASE TIME (sec.)	25	15	23	14	20	23	12	15	11	11
ICE OUT TIME (min.)	1:57	2:10	2:03	2:10	2:28	1:50	2:00	1:55	2:00	1:58
MINIMUM TIMER SETTING	3	3	3	3	3	3	3	3	3	3
PUMP DOWN R-12 LEVEL (CTR. BOTTOM COCK)	3" 11/4	3" 11/4	1" 14/4	3" 11/4	1" 14/4	3" 11/4	3" 11/4	1" 14/4	3" 11/4	1" 14/4
LBS. OF ICE PER CYCLE	45	42	57	42	52	29	32	35	29	36

ALL VALUES IN THE ABOVE CHART ARE APPROXIMATIONS INTENDED AS A GENERAL GUIDE ONLY.

FIG. 14

**NOTE: EACH INCH OF R-12 LIQUID LEVEL IS EQUAL TO APPROXIMATELY 5 LBS.*

SYMPTOMS & PROCEDURE

If the machine fails to operate satisfactorily, the following tables, which list causes and procedures under major symptoms, may be used for analyzing and correcting any difficulty.

TABLE A

FREEZE-UP DUE TO EXTENDED FREEZING PERIOD

CAUSE	PROCEDURE
1. Freezing time set too long.	See FREEZER PRESSURE SWITCHES.
2. Makeup water temperature varies between day and night operation.	See FREEZER PRESSURE SWITCHES.
3. Expansion valve (17) overfeeding.	See EXPANSION VALVE.
4. Warm condenser water entering water pan (7) thru overflow connection (40). (Water cooled units)	Pipe Water Outlet (24) and drain (25) separately to floor drain.
5. Drain Valve (39) from water pan open or leaking.	Close Valve.
6. Solenoid Valve (18) may be by-passing hot refrigerant gas into freezer (2) during the freezing period.	Clean or replace solenoid valve. Check Manual opening stem which should be at "ALL IN" position.
7. Makeup water float valve (12) stuck open.	Check operation of Float Valve and replace, if necessary. See FLOAT VALVE (Makeup Water).
8. Low Refrigerant Charge.	See REFRIGERANT CHARGE. Check system for leaks before adding refrigerant.

TABLE B

FREEZE-UP DUE TO ICE FAILING TO DISCHARGE

CAUSE	PROCEDURE
1. Low condensing pressure during freezing resulting in insufficient heat for thawing.	See Condenser Water Regulator (water cooled) or See Condenser Press. Regulator air cooled).
2. Thawing Timer (57) setting too short to allow all ice to clear freezer.	See THAWING TIMER.
3. Insufficient heat for thawing due to low refrigerant charge.	Check Item 8, Table A.
4. Non-Condensable Gases (Usually Air) in system.	See NON-CONDENSIBLE GASES.
5. Cutter does not turn.	Check Cutter Drive for proper operation. See that Drive Gear is tight on Cutter Motor Shaft. Check circuit breaker #62. Replace breaker, if defective.
6. Ice backs up into cutter, jamming it.	If machine discharges into an ice chute check angle of chute (30° minimum angle for cylinder ice - 45° for crushed ice). Ice may not contact bin thermostat control bulb to stop machine when bin is filled. See ICE BIN THERMOSTAT.
7. Ice fails to discharge from cutter area properly.	Ice mushy due to concentration of solids in water pan. Drain and clean water pan. Check "blowdown" during thawing. See FLOAT VALVE (Makeup Water).
8. Extended freezing period.	See Table A.
9. Inadequate flow of refrigerant through thawing chamber (16) to provide sufficient heat to prevent ice freezing at lower freezer tube head.	Irregular operation of expansion valve (Liquid line should stay frosted on outlet side during freezing). Clean or replace expansion valve. Check item 1, Table B. Check for restriction in liquid line at Drier (46) or solenoid valve (20).

TABLE C

LOW ICE CAPACITY

CAUSE	PROCEDURE
1. Low Refrigerant charge in freezer.	Check setting of expansion valve (17) See EXPANSION VALVE. Check for restriction in liquid line at expansion valve (17), Drier (46) or solenoid valve (20).
2. Low Refrigerant charge in Machine.	See Item 8, Table A.
3. Expansion Valve overfeeding.	See Item 3, Table A.
4. Restriction in Liquid Line.	Check for obstruction at expansion valve (17), Drier (46) or solenoid valve (20).
5. Solenoid Valve (18) may be leaking hot refrigerant gas into freezer (2) during the freezing period.	Clean or replace solenoid valve. Check manual opening stem which should be at "ALL-IN" position.
6. Water Distributors at top of freezer may be stopped up.	See WATER DISTRIBUTORS.
7. Makeup Water Float Valve (12) provides inadequate quantity of water for ice making.	See FLOAT VALVE (Makeup Water). Check water pressure at machine (30 PSI minimum recommended).
8. Warm makeup water for ice making.	Rated capacity of machine is based on temperature of 75°F. Warmer water will reduce the ice making capacity. (See capacity table, Page).
9. Makeup water float valve (12) stuck open.	See Item 7, Table A. See FLOAT VALVE (makeup water)
10. Drain valve (39), from water pan, open or leaking.	Close valve.
11. Warm condenser water entering water pan (7) through overflow connection (40).	See Item 4, Table A.
12. Controls for regulating freezing and thawing periods improperly set.	See FREEZER PRESSURE SWITCH AND THAWING TIMER.

Continued (over)

TABLE C (continued)

CAUSE	PROCEDURE
13. Excessive condenser pressure.	<p><u>WATER COOLED:</u> Check water inlet pressure and temperature and adjustment of condenser water regulator valve (41). Water flow through valve may be restricted due to dirt or other foreign material on valve seat. See CONDENSER WATER REGULATOR. There may be non-condensable gases present in the system. See NON-CONDENSIBLE GASES. Flow of water through condenser coil may be restricted due to scale deposits. See CONDENSER CLEANING. Excessive refrigerant charge submerging cooling coil in condenser. See CHARGING.</p> <p><u>AIR-COOLED:</u> Check pressure setting of Mercoïd Pressure Switch used for controlling the operation of the fan motor of the air-cooled condenser - See CONDENSER PRESSURE REGULATOR. There may be non-condensable gases present in the system. See REMOVAL OF NON-CONDENSIBLE GASES. Air circulation through condenser may be restricted due to dirt clogging fin section - See CONDENSER CLEANING.</p>
14. Extended thawing period.	<p>Check setting of thawing timer (57). See THAWING TIMER. Check timer motor. Replace timer, if necessary. Relay (61) may be sluggish in operation, resulting in a partial resetting of the thawing timer at completion of normal thawing period. Clean or replace relay. The electrical contact of the freezer pressure switch (56) may not be opening during the normal thawing period, resulting in a partial resetting of the thawing timer. See FREEZER PRESSURE SWITCH.</p>

TABLE D

SAFETY PRESSURE SWITCHES STOP MACHINE

CAUSE	PROCEDURE
1. Low Pressure Switch (29L) opens.	Compressor suction service valve (34) may be either closed or partially closed. Open valve wide. Check switch for improper setting (too high opening pressure).
2. High Pressure Switch (29H) opens.	Compressor Discharge Service Valve (45) closed or partially closed. Open valve wide. Check Item 13, Table C.

TABLE E

MOTOR OVERLOAD PROTECTORS STOP MACHINE

PROCEDURE

1. Compressor motor overload stops machine. (Note - Overloads are automatic reset type, located in junction box of compressor motor).

Motor overloaded due to excessive condensing pressure - see Item 13, Table C. Motor overloaded, due to a high suction pressure (gage 35), warm water in water pan and warm inlet water to condenser during startup after a prolonged shut-down period. Machine should operate satisfactorily after temperature of water in water pan is reduced sufficiently so that the suction pressure is less than 30 PSI. Check Items 3, 4, 5, 6 and 7, Table A. Compressor binding, or stuck - repair or replace compressor. Check fuses in disconnect switch - one fuse may be burnt out, resulting in single phasing compressor motor.
2. Compressor internal temperature thermal switch (CD-TS) stops machine.

Excessive temperature may be caused by gas leakage between suction and discharge valves of compressor valve plate. Check for broken valve plate gaskets or valves.
3. Cutter Motor Circuit Breaker (62) or pump motor circuit breaker (63) stops machine.

Crushed ice too thick, overloading cutter motor - check setting of Freezer Pressure Switch (56A) - see FREEZER PRESSURE SWITCHES. Crushed ice mushy, fails to discharge properly, overloading cutter motor - see Item 7, Table B. Cutter bearing tight in cutter hub, overloading cutter motor - replace bearing, if defective. Cutter drive worn or binding, overloading cutter motor - install new cutter drive, if necessary. Pump fails to rotate due to dirt or rust in impeller housing - dismantle and clean pump.
4. One of the 1 amp. fuses in control circuit stops machine.

Check Compressor Crankcase Heater, Coils of Relays, coils of Solenoid Valves and Thawing Timer for a ground. Repair or replace defective part.

Parts List for Vogt Models 1500, 1800, 3000 & 4000


Nomenclature	36 & 37
Control Panel	38 & 39
Compressor Delay Kit	39
Freezer Parts	39
Compressors & Accessories	40
Cutter Drive & Internals	41
Water Tank & Circulating Water	42
Condenser / Receiver	43
Air-Cooled Condenser / Accessories	43
Refrigeration Line Components	44
Water to Air-Cooled Conversion	45
Spreader Parts	45
Circuit Breaker Conversion Diagram	46
Syrelec Thaw Timer Wiring Diagram	47
Cutter Motor Wiring Diagram	48

Tube Ice Parts Telephone Number 800-853-8648 or 502-635-3235

Tube Ice Parts-Fax Numbers 800-770-8648 or 502-635-3024

Web Site Address www.tubeice.com

Visa and Mastercard Accepted

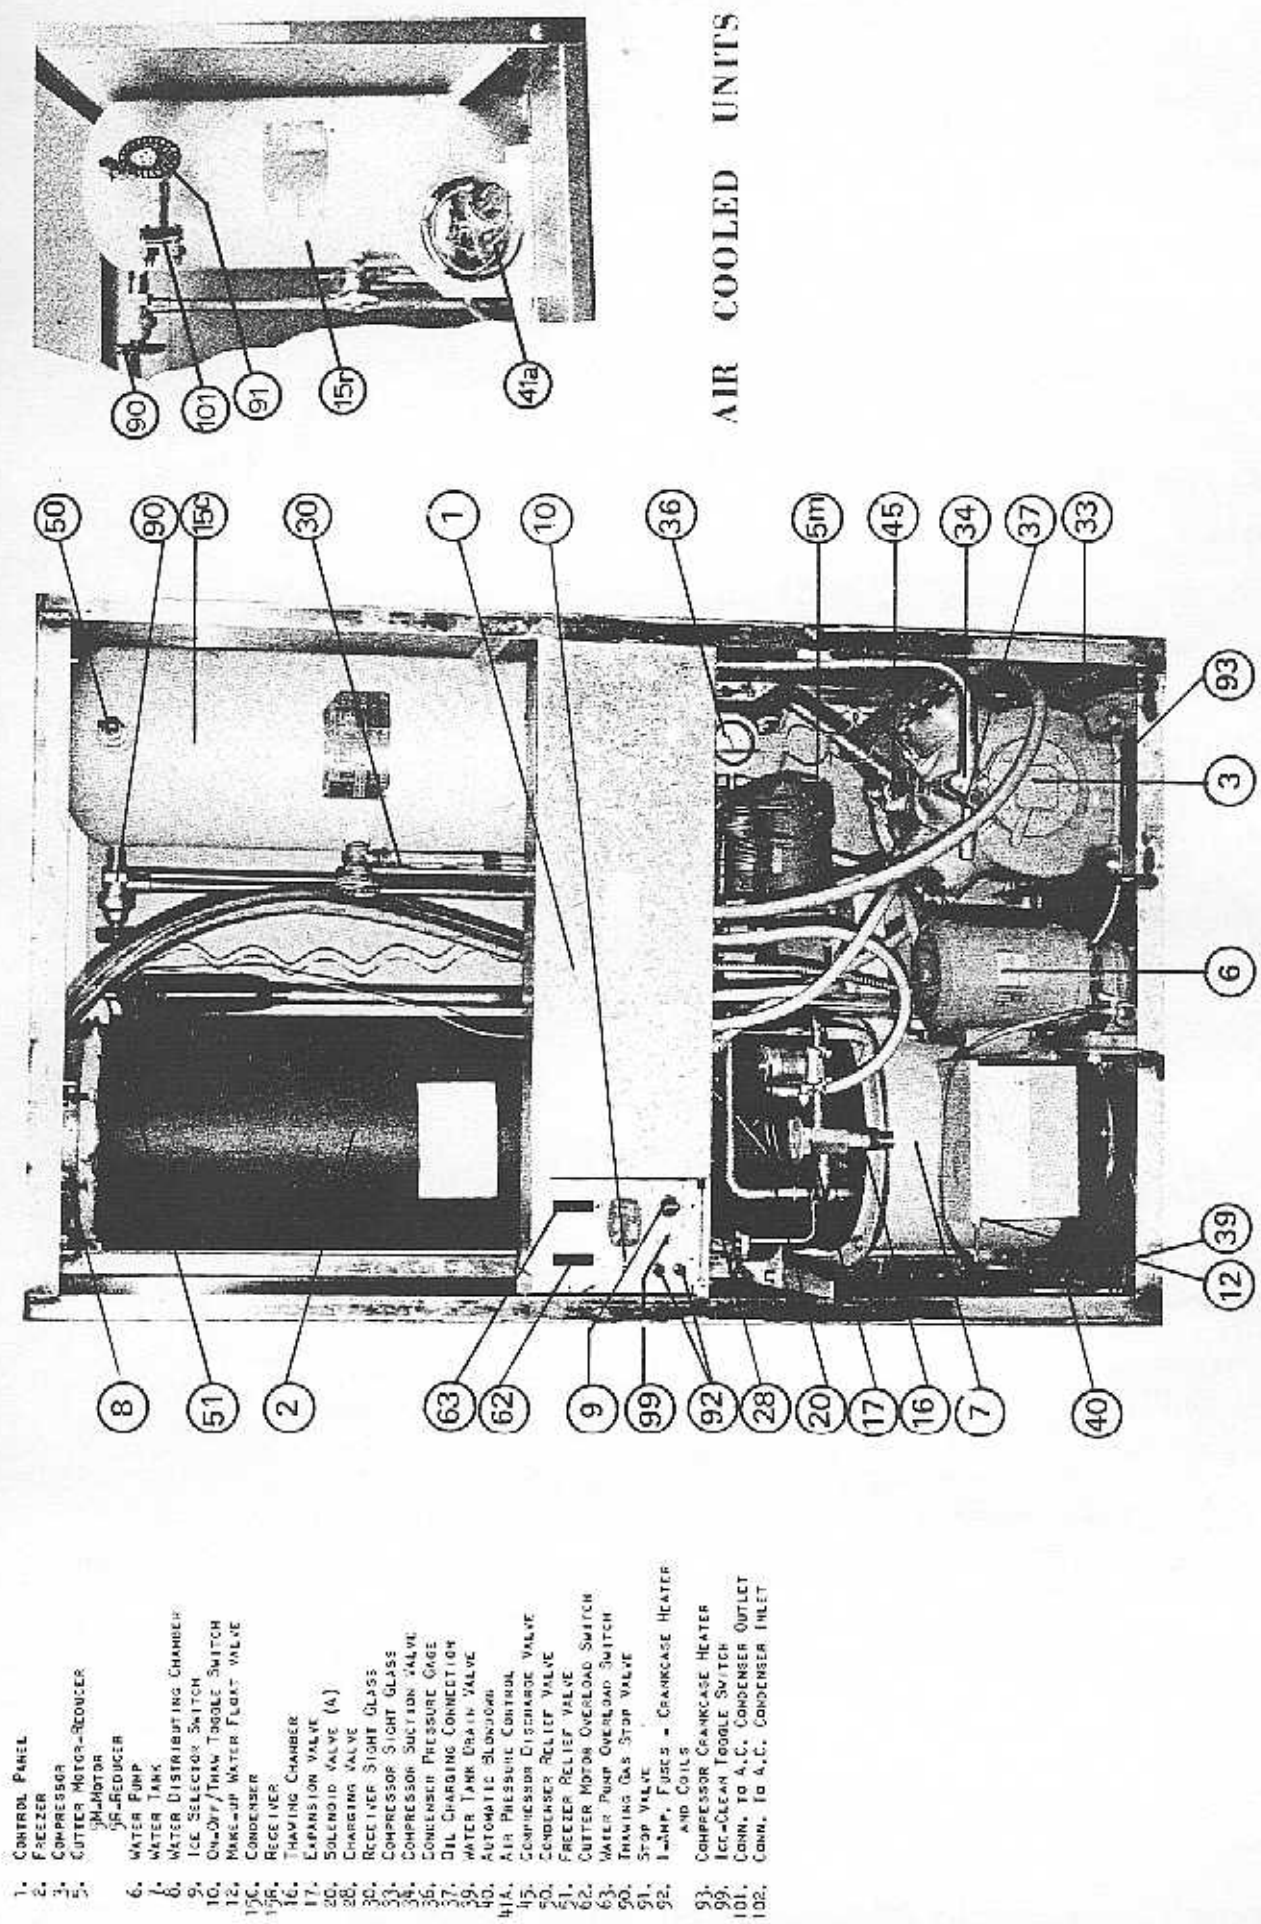


AIR COOLED UNITS

- 1. CONTROL PANEL
- 2. FREEZER
- 3. COMPRESSOR
- 5. CUTTER MOTOR-REDUCER
1/2 MOTOR
- 6. WATER PUMP
- 7. WATER TANK
- 8. WATER DISTRIBUTING CHAMBER
- 9. ICE SELECTOR SWITCH
- 10. ON-OFF/THAW TOGGLE SWITCH
- 12. MAKE-UP WATER FLOAT VALVE
- 13. CONDENSER
- 15. RECEIVER
- 16. THAWING CHAMBER
- 17. EXPANSION VALVE
- 20. SOLENOID VALVE (A)
- 28. CHARGING VALVE
- 30. RECEIVER SIGHT GLASS
- 33. COMPRESSOR SIGHT GLASS
- 34. COMPRESSOR SUCTION VALVE
- 36. COMPRESSOR PRESSURE GAGE
- 37. OIL CHARGING CONNECTION
- 39. WATER TANK DRAIN VALVE
- 40. AUTOMATIC BLOWDOWN
- 41A. AIR PRESSURE CONTROL
- 45. COMPRESSOR DISCHARGE VALVE
- 50. CONDENSER RELIEF VALVE
- 51. FREEZER RELIEF VALVE
- 62. CUTTER MOTOR OVERLOAD SWITCH
- 63. WATER PUMP OVERLOAD SWITCH
- 90. THAWING GAS STOP VALVE
- 91. STOP VALVE
- 92. 1-AMP. FUSES - CRANKCASE HEATER AND COILS
- 93. COMPRESSOR CRANKCASE HEATER
- 99. ICE-CLEAN TOGGLE SWITCH
- 101. CONN. TO A.C. CONDENSER OUTLET
- 102. CONN. TO A.C. CONDENSER INLET

NOMENCLATURE
(front)

FIG. 16

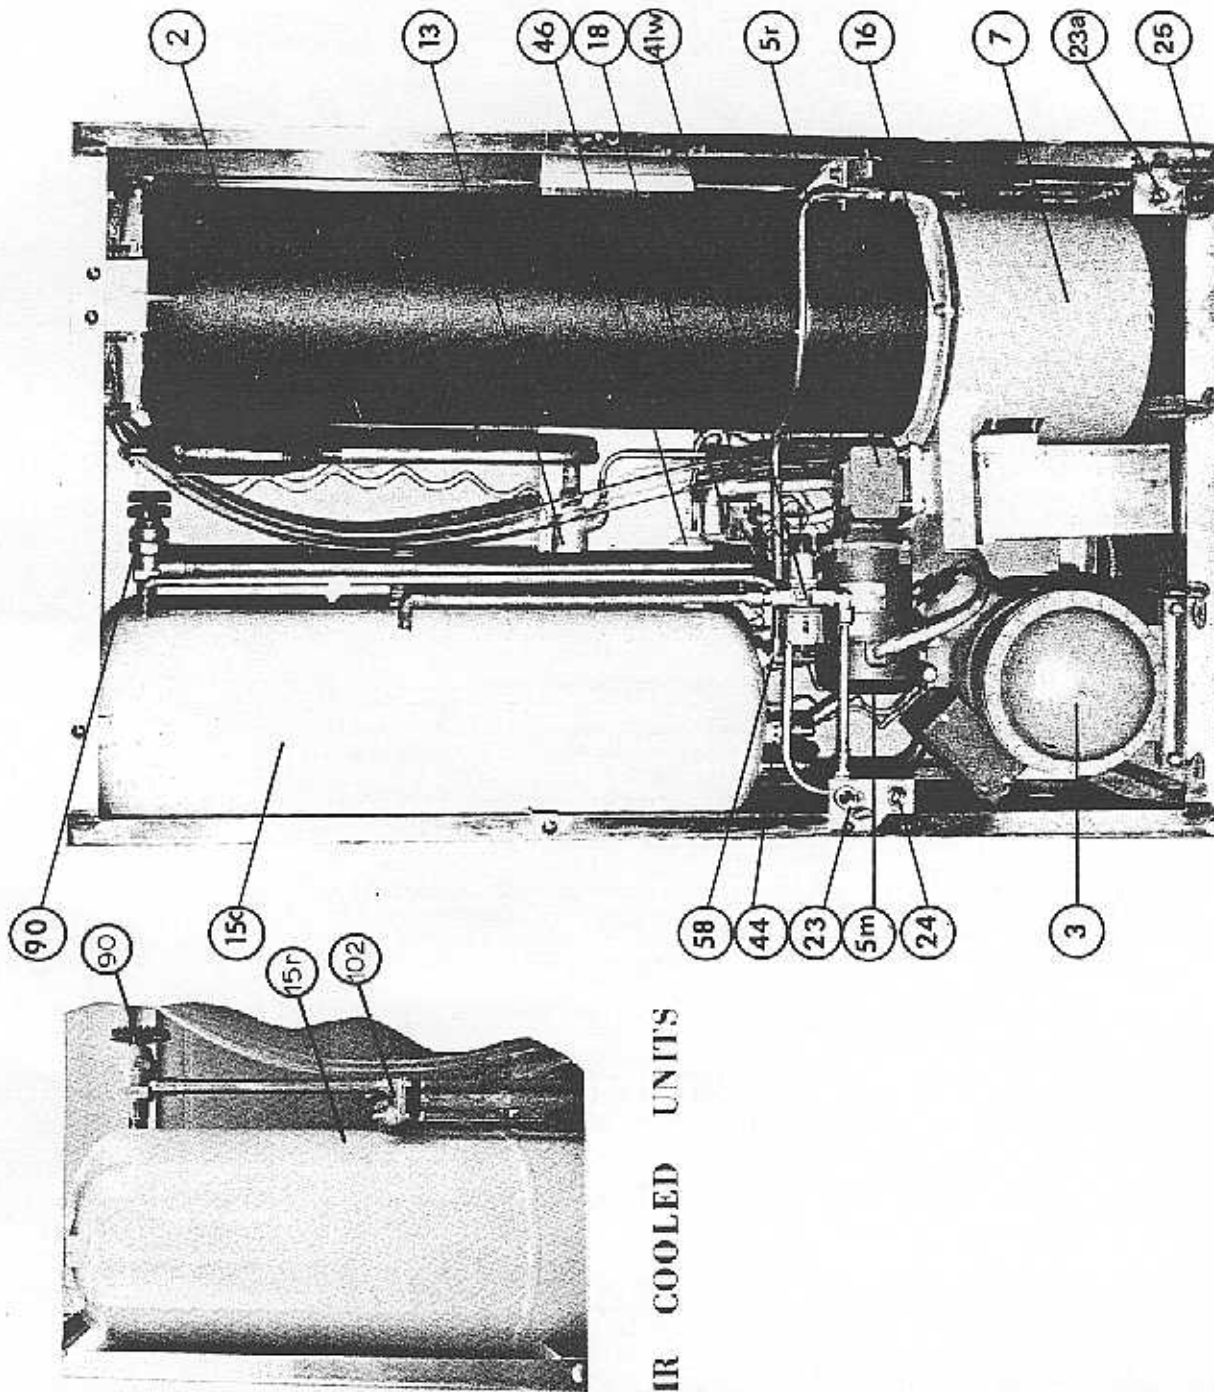

AIR COOLED UNITS

2. FREEZER
 3. COMPRESSOR
 5M. CUTTER MOTOR
 5R. CUTTER REDUCER
 7. WATER TANK
 13. HEAT EXCHANGER
 15C. CONDENSER
 15R. RECEIVER
 16. TRAWING CHAMBER
 18. SOLENOID VALVE (S)
 23. CONDENSER WATER INLET, $\frac{1}{4}$ " FPT.
 23A. MAKEUP WATER INLET, $\frac{3}{8}$ " FPT.
 24. CONDENSER WATER OUTLET, $\frac{1}{2}$ " FPT.
 25. WATER TANK DRAIN, $\frac{1}{2}$ " FPT.
 41W. RECEIVER SIGHT GLASS
 44. CONDENSER WATER REGULATOR
 46. RECEIVER DRAIN VALVE
 58. DRIER
 5R. CONDENSER LIQUID OUTLET VALVE
 90. TRAWING GAS STOP VALVE
 101. CONN. TO A.C. CONDENSER (OUTLET)
 102. CONN. TO A.C. CONDENSER (INLET)

NOMENCLATURE
(rear)

FIG. 17

Control Panel Parts

<u>Ref.#</u>	<u>Qty</u>	<u>Part Number</u>	<u>Description</u>
9	1	12B7500E07	Switch Selector, Crushed, Cylinder, Auto
10	1	12A7500E05	Switch, On . Off . Manual Harvest
99	1	12A7500E08	Switch, Ice - Clean
11	2	12A2117G03	Ice Bin Thermostat, 6ft. (standard)
11	2	12A2117G01	Ice Bin Thermostat, 15ft. (optional)
11	2	12A2117G09	Ice Bin Thermostat, Electronic (optional)
29L	1	12A2117B01	Low Pressure Switch 60" cap tubing
29H	1	12633	High Pressure Switch 60" cap tubing
56	1	12A2117E01	Freezer Pressure Switch, (crushed or cylinder)
MC	1	12A2117F06	Air Cooled Condenser Fan Control range 0/150
	1	12D2590G09	Condenser Pressure Gauge, 30" to 400#
57	1	12A7503E22	Thaw Timer Syrelec, 220V Delay on Make
	1	12A 7503E2201	Timer Base for Above Timer (8 pin plug-in)
61/71	2	12A7517E08	Control Relay (CR) or Reversing (R) 208V 60Hz Potter Brumfield can be used with 230V
61/71	2	12A7517E07	Control Relay (CR) or Reversing (R) 230V 60/50 Hz Potter Brumfield
61/71	2	12A7517E1	Control Relay (CR) or (R) Reversing 208V 60Hz Requires Cont. Cartridge - 12A 7518E01
	2	12A7518E01	Contact Cartridge, N.O./N.C. for AB Relays
64/95	2	12A7516E17	Control Contactor (CC) or Compressor Motor Contactor (C) 208/240-50/60 Cutler-Hammer
CP	1	12A7516E09	Air-Cooled Condenser Fan Contactor C.H.
TR	1	12A519E03	Control Circuit Transformer 460-230V 1 KVA
92	2	12A7502E07	Fuse Holder for Single Fuse
92	2	12A7504E08	Fuse 1 Amp 250V (order in multiples of 5)
92	1	12A7504E09	Fuse 2.5 Amp 250V (order in multiples of 5)
36	1	12D2590G09	Condenser Pressure Gage 30" to 400 lbs.

Control Panel Parts

<u>Ref.#</u>	<u>Qty</u>	<u>Part Number</u>	<u>Description</u>
62	1	12A7515E01	Circuit Breaker 2.5 Amp, Airpax
62	1	12A7515E05	Circuit Breaker 3.0 Amp, Airpax
63	1	12A7515E07	Circuit Breaker 4.5 Amp, Airpax
62	1	12A7515E17	Circuit Breaker 5.5 Amp, Airpax
63	1	12A7515E06	Circuit Breaker 6.0 Amp, Airpax
	1	12A4000G0104	Circuit Breaker Mounting Bracket
36	1	12D2590G09	Condenser Pressure Gage

Compressor Delay Kit

	1	12A7503E12	Compressor Delay Timer, 5 Seconds
	1	12A7516E09	Contactora, 2 Pole 10 Amps CH
	1	12A7500E08	Toggle Switch, 3 Amp 240V

Freezer Parts

8	1	12A2600G01	Freezer Cover Gasket, 13 X 11 11/16
8	1	12A2145C06	Freezer Chamber Cover, Aluminum
	8	12A2222H1118	Stainless Steel Stud 3/8(For Freezer Cover)
	8	12A2240H4109	Brass Wing Nut, 3/8"
	8	12A2250A109	Cut Washer, 3/8" S.S.
51	1	12A4200L0401	Superior Relief Valve, Set @ 235 PSI
	78	12B 185N11	Water Distributor for 1" tubes M/1800,3000,4000
	36	12B2185N31	Water Distributor for 1 1/2" tubes M/ 1500, 2500
	1	12A4009R01	Rubber Plug for 1" Dia Tube 3/8 ID Hole
	1	12A 4009R03	Rubber Plug for 1 1/2 Dia. tube 3/8 ID Hole
	1	12A2215H1119	Machine Screw 3/8" X 3" Long S.S.
	1	12A2240A1109	Hex Nut, 3/8" X 16 S.S.
	1	12A2250A109	Cut Washer 3/8" S.S.

Compressors / Accessories

<u>Ref.#</u>	<u>Qty</u>	<u>Part Number</u>	<u>Description</u>
3	1	12A2110A22	2HP Carlyle, 208/230-3-60HZ M1500/1800
3	1	12A2110A24	2HP Carlyle, 460-3-60/400-3-50 M1500/1800
3	1	12A 2110A23	2HP Carlyle, 230V-3-50HZ M1500/1800
3	1	12A2110A21	2HP Carlyle, 230V-1-60HZ M1500/1800
3	1	12A2110A32	5HP Carlyle, 208/230-3-60HZ M2500/3000
3	1	12A2110A34	5HP Carlyle, 460-3-60/400-3-50 M2500/3000
3	1	12A2110A33	5HP Carlyle, 220V-3-50HZ M2500/3000
3	1	12A2110A42	6.5HP Carlyle, 208/230-3-60HZ M4000
3	1	12A2110A43	6.5HP Carlyle, 220V-3-50HZ M4000

COMPRESSORS COME COMPLETE WITH JUNCTION BOX AND OVERLOADS AND ARE SHIPPED WITH NO OIL CHARGE.

Weights for Shipping Purposes: 2HP--175lbs., 5HP—230lbs., 6.5HP—320lbs.

	1	12A2110P0201	Valve Plate Pkg. 1--2HP 2--5HP 3--6.5HP
	1	12A7509E09	Crankcase Heater, Strap On 65 Watt
	2	12A4130S07	Spacer for Crankcase Heater
	1	12A7509E02	Crankcase Heater, Insertion M4000 180Watt
	1	12A7509F01	Retainer Ring for Insertion Type Heater
	1	12A509F02	Thermal Grease for Insertion Type Heater
	1	126608	Gasket Set for 06DA,-DR,-DM Compressor
	1	126609	Suction Valve Gasket for 2HP Compressor
	1	12661	Suction Valve Gasket for 5HP Compressor
	1	126611	Suction Valve Gasket for 6.5HP Compressor
	1	126609	Discharge Gasket, 2HP&5HP Compressor
	1	12661	Discharge Gasket, 6.5HP Compressor
	2	12A7523E01	Klixon Overload for M1500/1800
	2	12A7523E03	Klixon Overload for M2500/3000
	2	12A7523E09	Klixon Overload for M4000

Cutter -- Drive / Internals

Ref.#	Qty	Part Number	Description
5M	1	12A2900M0507	Cutter Motor, U.S. 1/2 HP 208/230-1-50/60 *

*Replaces 1/4HP Cutter Motor (12C 2900M0301). Requires 5.5 Amp Circuit Breaker
Part #12A7515E17

5R	1	12A4030R07	Gear Reducer, Grove 10:1 Ratio
	1	19T2615D01	Cutter Drive Gear, W/O Hub
	1	12A2160H0101	Hub for Cutter Drive Gear
	1	126411	Cutter Assembly Including Shaft & Ring Gear
	1	127324	Cutter Shaft
	1	19T2615R01	12" Finished Ring Gear, Aluminum & Bronze
	1	12B2020R01	UHMW Cutter Bearing
	1	12A3040S02	Roll Pin for Cutter Bearing
	1	19T2025B0103	Cutter Bearing Support (Short Style)
	1	19T2163D0101	Cutter Disc Assembly, Perforated S.S.
	1	12A3040S01	Roll Pin for Stainless Steel Cutter Disc
	1	126431	Deflector Plate
	1	12A4071S03	Rivet for Deflector Plate 3/16 X 2 1/4 Ft. Head
	1	126433	Deflector Activating Rod
	1	121607	Ice Chute Assembly
	1	12A2005A01	Plate Adapter Kit for 1" Ice M1500/2500-- Spacers, Bolts, etc.
	3	12A4130S02	Adapter Plate Spacer 5/8 O.D. X 3/8 LG S.S.
	3	12A2226F1109	Machine Screw 1/4 X 7/8 Flat Head S.S.
	3	12A2240A1307	Hex Nut 1/4 X 20 S.S.
	3	12A2250B107	Lock Washer 1/4 S.S.
	1	12A2005A02	Adapter Kit for 3/4" Ice M1800, 3000, 4000-- Spacers, Bolts etc..
	2	12A4130S01	Adapter Plate Spacer 5/8 O.D. X 1/8 LG S.S.
	2	12A4130S03	Adapter Plate Spacer 5/8 O.D. X 5/8 LG S.S.
	2	12A2226F1108	Machine Screw 1/4 X 3/4 Flat Head S.S.
	2	12A2226F1112	Machine Screw 1/4 X 1 1/4 Flat Head S.S.
	4	12A2240A1307	Hex Nut 1/4 X 20 S.S.
	4	12A2250B107	Lock Washer 1/4 S.S.

Water Tank & Circulating Water

Ref.#	Qty	Part Number	Description
	1	12A2600G02	Water Tank Gasket 15 3/4 OD X 13 3/4 ID
12	1	12A4200H0201	Make Up Water Float Valve
	1	126011	Float Chamber Cover
6	1	12A4020A06	A/P Water Pump 1/2 HP 208/230-1-60HZ*
6	1	12A4020A07	A/P Water Pump 1/2 HP 208/230-150HZ*

American Products water pump replaces all sidewall mounted pumps, and requires 6.0 Amp breaker, and breaker mounting bracket. Mounting Kits and Mounting Plates are required, and breakers and brackets are included in kits. A kit is also available to convert machines built in '88/ '89 with American Products pumps (three-leg) to the current design American Products (four-leg) water pump.

	1	12B4020Z04	Mounting Kit Converts Sidewall to A/P Pump
	1	12B4000S0904	Mounting Plate for American Products Pump M1500, 1800, 3000
	1	12A4000S1004	Mounting Plate for American Products Pump M2500 & 4000
	1	12A4020Z03	Mounting Kit for A/P 3-Leg to Current A/P
	1	12A4080S04	Seal Assembly for A/P Pump
	1	12A4020Y02	Impeller for A/P Pump
	1	126779	Impeller for A/P 3-Leg Pump
	1	126628AP	Pump Housing O-Ring for A/P Pump
	1	12A4080S05	Seal Assembly for Gusher Pump
	1	12A4080S01	Pump Gasket for Sidewall Mounted Pump
	1	12A4080S01	Seal Assembly for Aurora 320 Series
	1	12663	Gasket for Impeller Housing on Aurora Pump
	5	12A4181T06	1 1/2 ID X 1 1/2 OD Tubing for Circulating Water (Sold Per Foot)
	2	12A4181T05	1 ID X 1 1/2 OD Tubing for Pump Suction (Sold Per Foot)
	2	12A4181T01	5/8 ID X 7/8 OD Tubing for Water Tank Drain (Sold Per Foot)
	3	12A4181T08	1/4 ID X 3/8 OD Tubing for Blowdown
	1	12A4200G0101	1/8 MPT X 1/4 Hose Pet Cock Valve for Pump Blowdown

Condenser – Receiver

<u>Ref.#</u>	<u>Qty</u>	<u>Part Number</u>	<u>Description</u>
15	1	12A2115S0401	Standard Condenser for M1500/1800 50lbs.
15	1	12A2115S0301	Standard Condenser for M2500/3000 65lbs.
15	1	12A2115S0201	Standard Condenser for M4000 95lbs.
15	1	12A2055B01	Adjustable Cleaning Tool for Standard Cond.
	1	12659623	Gasket Set for K2X & K3X Standard Cond.
	1	1265965	Gasket Set for K5X Standard Condenser
	1	12A4200J0403	Upper Gage Cock Valve, 1/2"
	1	12A4200J0404	Lower Gage Cock Valve, 1/2"
30	1	12A 625G01	Gage Glass 1/2" X 10 1/16 for Models M1500, 1800, 3000
30	1	12A2625G06	Gage Glass 1/2" X 15 1/8 for Models 2500 & 4000
	2	12A4199V26	Gage Glass Seals for 1/2" Glass
	1	12A2635G02	Gage Glass Guard Set, 14" Long (2 per Set)
50	1	12A4200L0401	Superior Relief Valve Set 1/2" 235 1/2 MPT
	1	12A2975M05	AC&R Muffler 7/8 IDS
41	1	12A4200E0403	Water Regulator 1/2" M1500/1800/2500/3000
41	1	12A4200E0605	Water Regulator 3/4" M 4000 Shell & Coil
41	1	124200E0802	Water Regulator 1" M 4000 External Cond.
44	1	12A4200G0201	Condenser Drain Valve, 1/4 MPT X 1/4" SAE
50	1	12A4200J0401	Condenser Relief Valve

Air Cooled Condensers / Accessories

15	1	12A 2115KS041	Kramer Air Cooled Condenser M1500/1800
15	1	12A 2115KS061	Kramer Air Cooled Condenser M2500/3000
15	1	12A 2115KS101	Kramer Air Cooled Condenser M4000
	1	12A 2115P0301	Fan Blade for HDD60 Condenser
	1	12A 2900M0101	Condenser Fan Motor for DD41 Condenser
	1	12A 2900M0401	Condenser Fan Motor for DD60 Condenser
	1	12A 2900M0506	Condenser Fan Motor for DD101 Condenser

Refrigeration Line Components

<u>Ref.#</u>	<u>Qty</u>	<u>Part Number</u>	<u>Description</u>
13	1	12A2710H04	Heat-Exchanger 1 1/8" Suction X 1/2"
17	1	12A4200C0401	Expansion Valve for M1500/1800
17	1	12A4200C0501	Expansion Valve for M2500/3000/4000
20	1	12A4200A0402	Liquid Line Solenoid Valve (A Valve) 1/2"
	1	12A4199V02	Repair Kit,Liquid Line Solenoid Valve(RB9)
18	1	12A4200A0501	Thawing Gas Valve. (D Valve) M1500/1800
	1	12A4199V05	Repair Kit, Thaw Gas Line Solenoid Valve
18	1	12A4200A0701	Thaw Gas Valve(D Valve)M2500/3000/4000
	1	12A4199V07	Repair Kit, Thaw Gas Line Solenoid Valve
	1	126232RB	Coil for All RB Solenoids 208/230, 50/60
	1	126232	Coil.B3MS4.B4MS. B3MS5. B6MS.B6MS7
	1	12A4199V01	Diaphragm Kit with Plunger for B3MS4
	1	12A4199V04	Diaphragm Kit with Plunger B4MS. B4MS5
	1	12A4199V06	Diaphragm Kit with Plunger B6MS. B6MS7
46	1	12A2195D01	Filter Drier for M1500/1800 1/2" SAE
46	1	12A2195D02	Filter Drier for M2500/3000/4000
58	1	12A4200G0401	Liquid Feed-King Valve 1/2" MPT X 1/2" ODC
90	1	12A4200G0701	Thawing Gas Valve 7/8" Angle -
28	1	12A4200G0205	Charging Valve 1/4 ODC X 1/4 SAE

Water to Air-Cooled Conversion

The parts listed below are required for conversion from water-cooled to air-cooled operation, in addition to the proper air-cooled condenser.

<u>Ref.</u>	<u>Qty</u>	<u>Part Number</u>	<u>Description</u>
CP	1	12A 7516E0900	Contactora for Air-Cooled Condenser
MC	1	12A 2117F0600	Condenser Fan Control. Penn 0-150 Range
	1	12A 4200A0501	Discharge Line Solenoid M1500/1800
	1	12A 4200A0701	Discharge Line Solenoid M2500/300/4000
	1	12A 4200B0501	Return Line Check Valve M1500/1800
	1	12A 4200B0701	Return Line Check Valve M2500/300/4000
	1	12A 2451U0500	Union ¼ SAE Flare X 1/4 MPT
	1	12A 2451T0300	1/4 Flare X 1/4 Access X 1/4 Female Swivel
	1	12A 1501S10	Cap Tube Assembly



Ice Spreader, Parts

	1	12A 2900M0201	Drive Motor 1/10 HP 208/230-1-60HZ
	1	12A 4099S0100	Drive Pulley for Motor 1 ½"
	1	12A 4099S0200	Drive Pulley for Shaft 4 ½"
	1	12A 2030B0100	V - Belt 3/8" Wide X 27" Long
	1	25 1607SSH000	Ice Spreader Shaft, 5/8" O.D. X 25" Long
	1	12A 2020M0100	Upper Bearing Peer ½" Bore*

*Requires Bearing Block listed below if converting from Pillow Block type bearing.

	1	12A 4135PS05	Bearing Block for Upper Bearing
	1	12A 2020M06	Lower Bearing Block (Pillow Block) 5/8"
	1	12A 4135PS07	Ice Spreader Distributor (6" Plastic Tee)
	1	12A 2032B08	Bin Level Control. Indicator W/ 4" Shaft
	1	12A 2032B0	Paddle for Bin-Master

CIRCUIT BREAKER CONVERSION

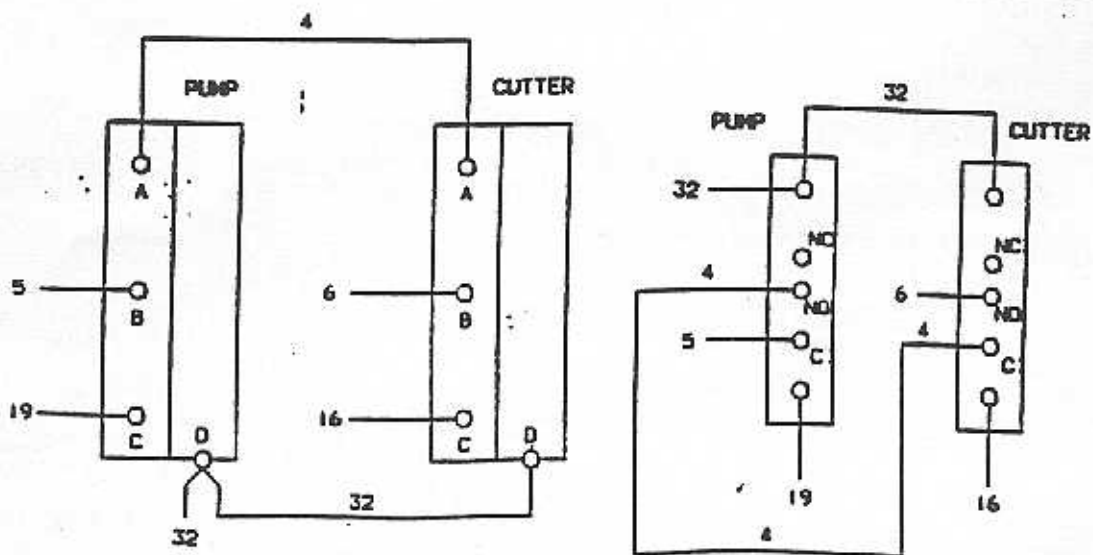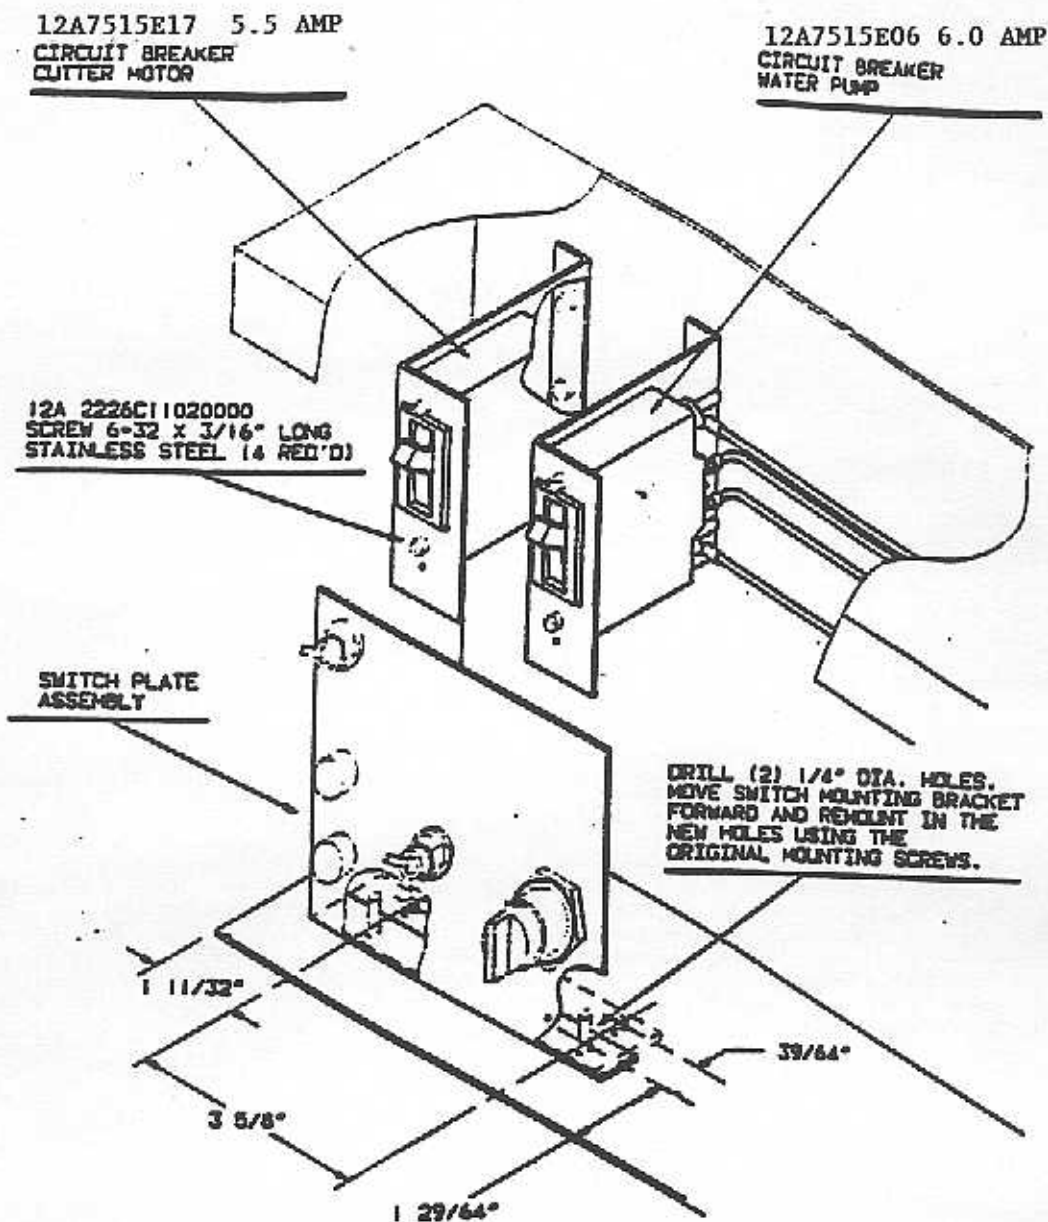


OLD BREAKERS


(VIEWED FROM REAR)

NEW BREAKERS

SYRELEC PLUG-IN TIMER
FOR M1500 -- 4000

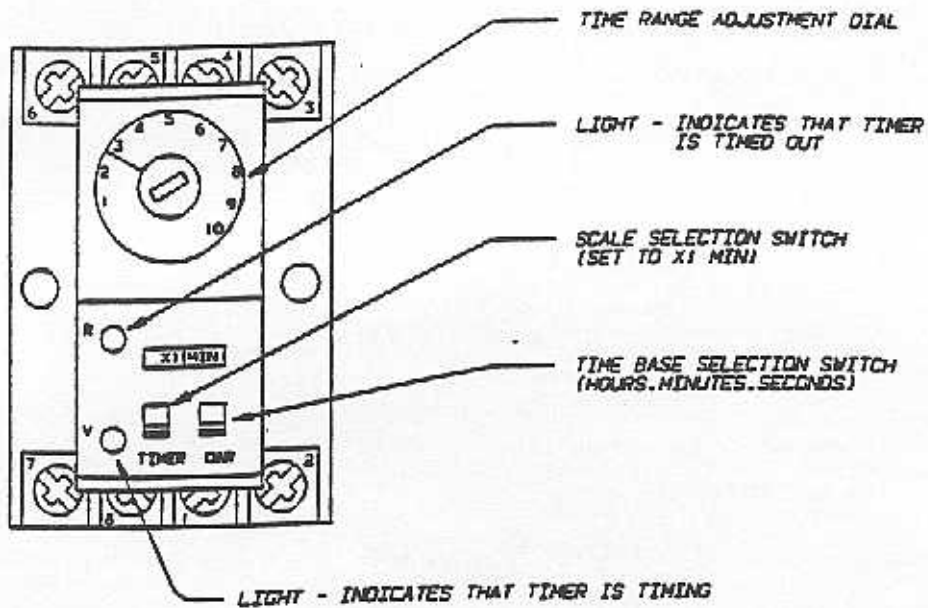

WIRING OF BASE

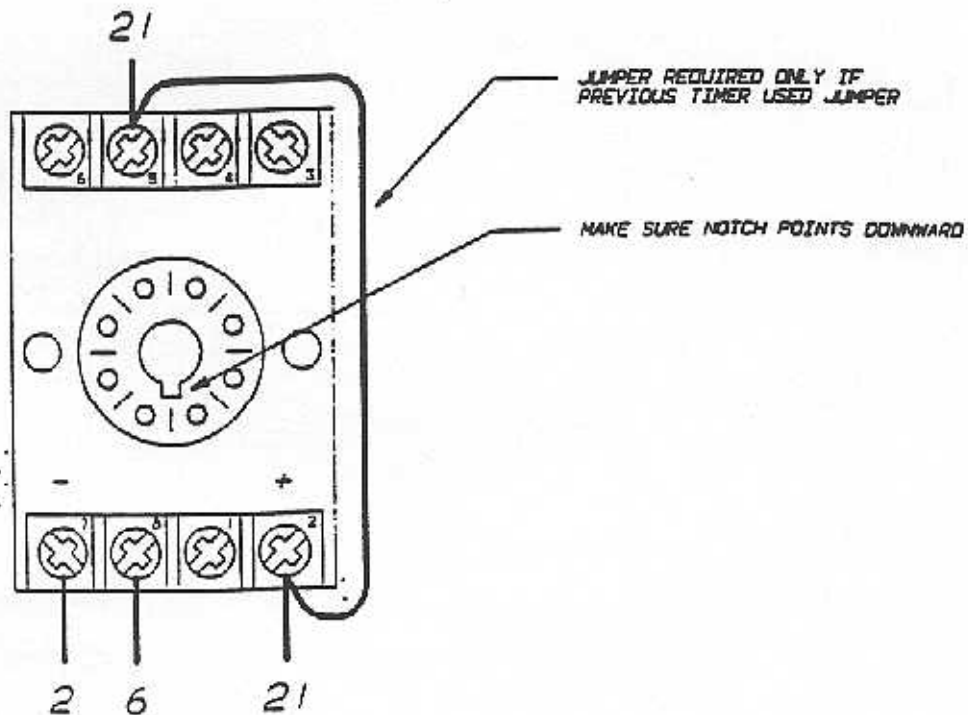

VOGT #12A-7503E22
VOGT #12A-7503E2201


TIMER
TIMER BASE

The new US Motor has the following specifications:

Manufacturer's Model #	CA55CWP-1851
Horse Power	1/2 HP
Service Factor	1.25
Frequency Rating	60 / 50 hz
Voltage	208-230 V / 200-220 V
FLA	4.1A / 5.1A

The drawing below shows the wiring of the new 1/2 HP US Motor (12A2900m0507)

Wiring Diagram for M1000 through M4000 (1/2 HP US Motor)

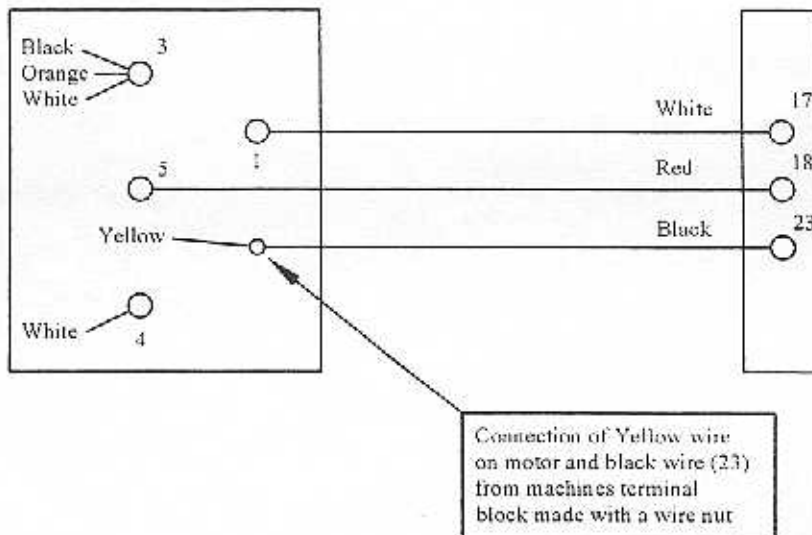


VOGT HAS TESTED MP39 (R401A) AS AN ALTERNATE REFRIGERANT FOR R-12 AND RECOMMENDS THE FOLLOWING GUIDELINES FOR CHANGEOUT IN THE MODELS 1500 THRU 4000.

All of Dupont's guidelines should be followed with the following modifications:


1. Drain as much oil from the evaporator as possible.
2. Charge the system as per Vogt instructions. **DO NOT** reduce the charge as Dupont recommends. Vogt machines need the full charge to defrost properly.
3. Reset the head pressure to 130 PSIG.
4. Check the frost pattern and adjust the expansion valve so that the frost line comes up just to the inlet of the heat exchanger.
5. Perform periodic oil tests to check the concentration of alkybenzene oil. A concentration of 90 to 95% is acceptable. Drain and fill as needed to achieve the desired concentration.

NOTES


CUTTER ASSEMBLY

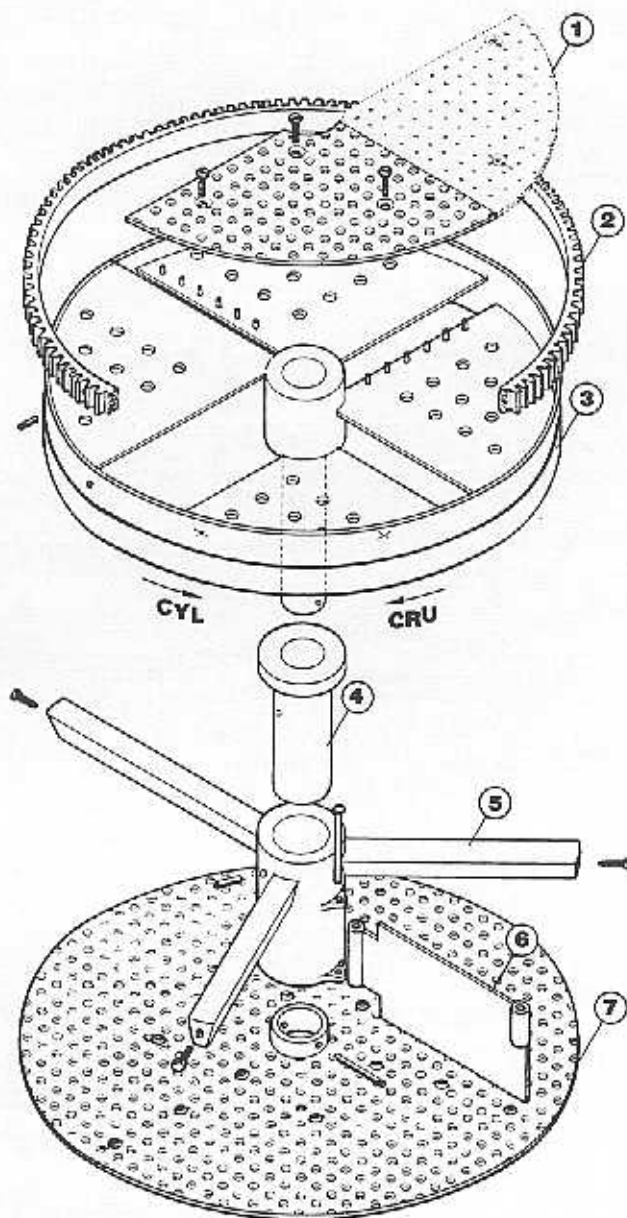

1. Adaptor Plate - M-1500 and M-2500, 1/4 section for 1" long ice (#12-7021)
 M-1800, M-3000 and M-4000, 1/2 section for 3/4" long ice (#12-7021-1)
 All models less adaptor plate, 1 1/2" long ice
2. Ringgear - All models part # 12-6639
3. Cutter - All models, part #12-6411 (includes ringgear)
4. Cutter Bearing - All models, part #12-6030-24
5. Bearing Support - All models, part #12-6077
6. Deflector - All models, part #12-6431
7. Disc - All models, part #12-6479

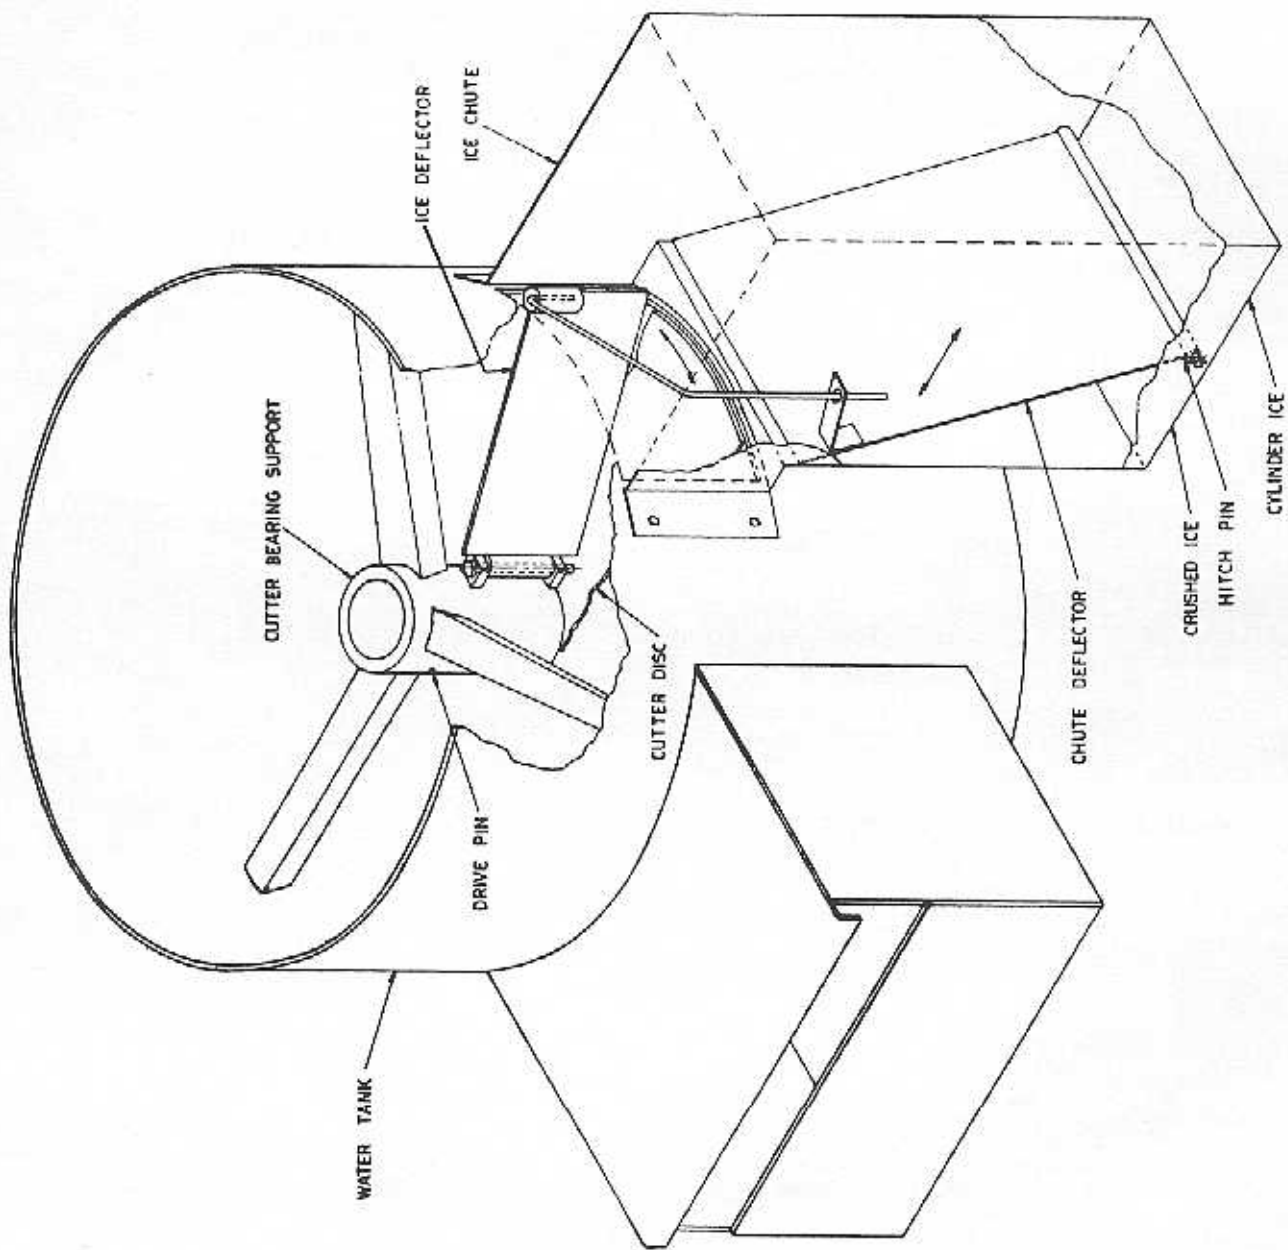

ICE DISCHARGE ARRANGEMENT

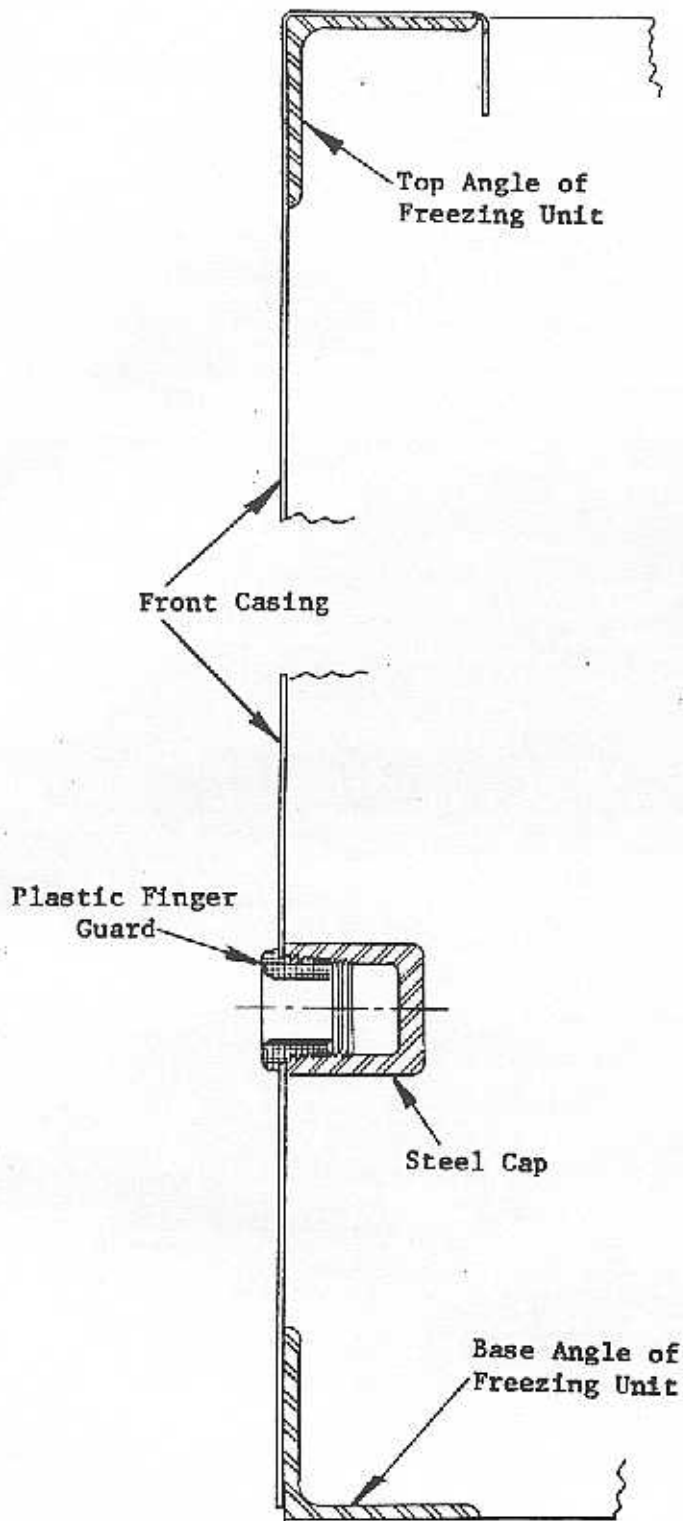


FRONT CASING INSTALLATION

1. Insert two (2) plastic finger guards in 1-1/16" diameter holes.
2. Tighten steel cap on each guard.
3. Front casing hooks over top angle.


SECTIONAL ASSEMBLY

Henry Vogt Machine Co.
 Louisville, Kentucky
 7-23-73

OPENING FOR ICE DISCHARGE
FROM TUBE-ICE MACHINE

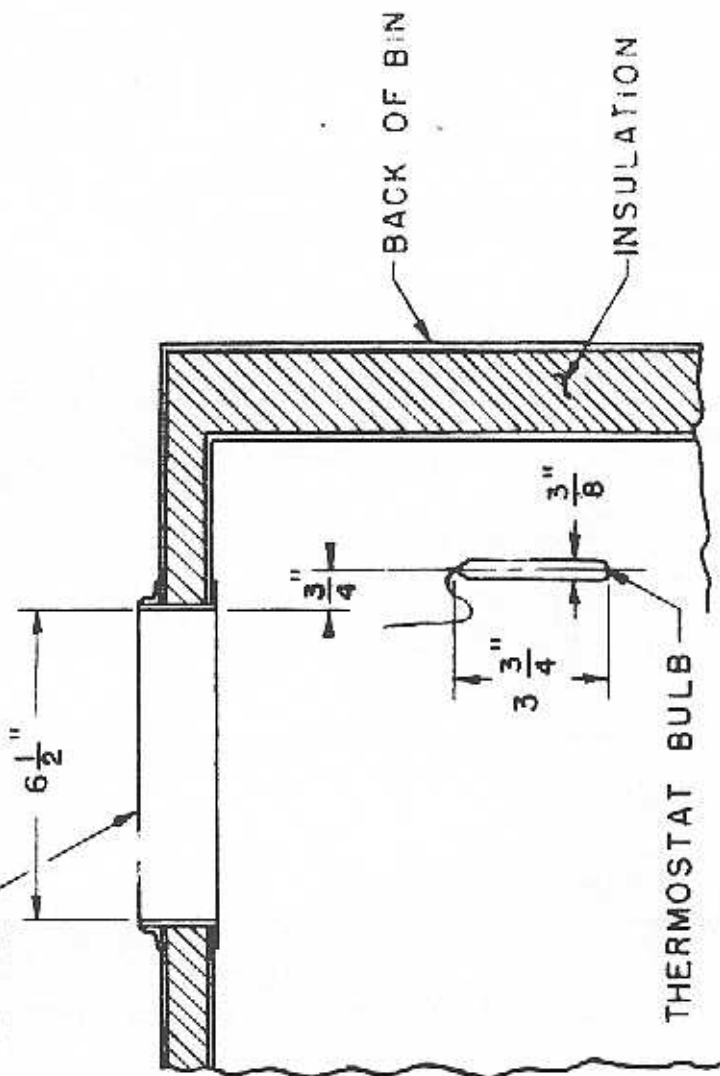

SIDE VIEW

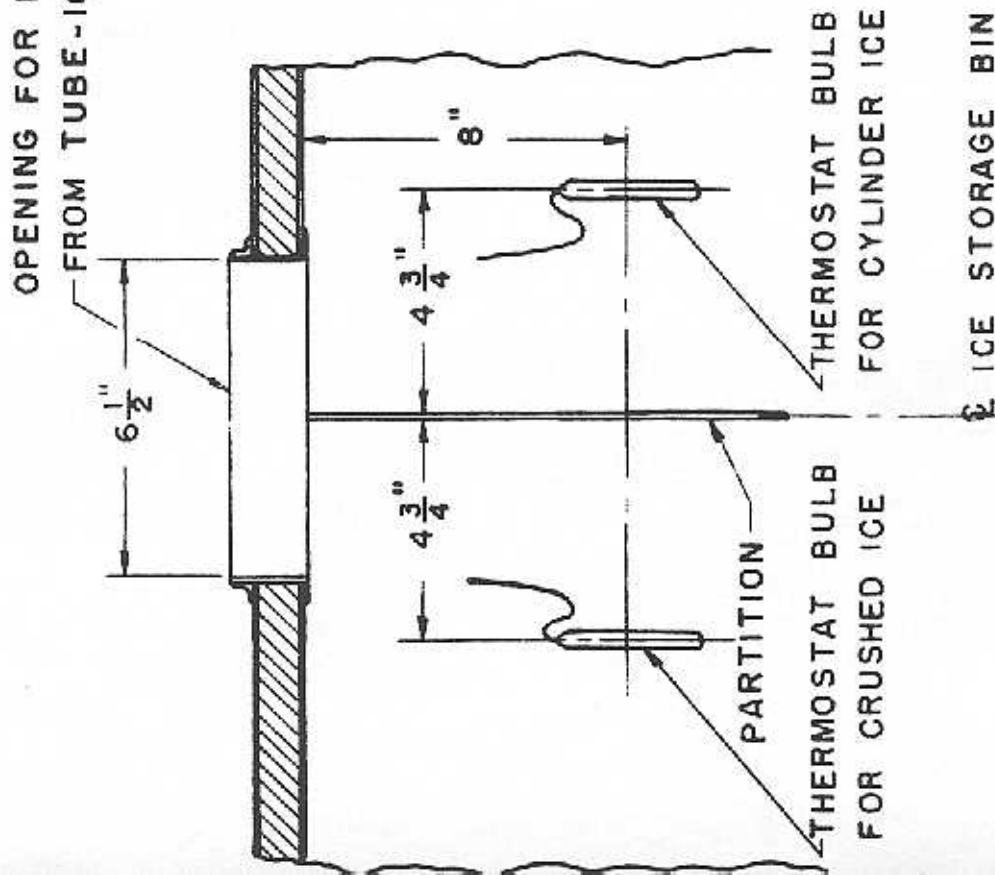

FRONT VIEW


LOCATION OF THERMOSTAT BULBS
FOR ICE STORAGE BIN

FINAL CHECK LIST

FOR INITIAL START-UP OF

Vogt TUBE-ICE MACHINES

1. **check**
ALL WATER SUPPLY AND DRAIN CONNECTIONS FOR CONFORMITY TO REQUIREMENTS STIPULATED IN MANUAL FURNISHED WITH MACHINE.
2. **check**
ELECTRICAL SUPPLY FOR PROPER SIZE OF FUSES AND/OR CIRCUIT BREAKERS AND FOR COMPLIANCE TO LOCAL AND NATIONAL CODES.
3. **check**
ALL FIELD INSTALLED EQUIPMENT (AIR COOLED COND., ICE STORAGE BIN, CONVEYORS ETC.) FOR PROPER INSTALLATION.
4. **check**
REFRIGERANT LEVEL SHOWN IN GAUGE GLASS ON CONDENSER/RECEIVER (GAUGE COCKS MUST BE OPEN WHEN CHECKING LEVEL). OPEN VALVES TAGGED TO BE OPENED.
5. **check**
OIL IN COMPRESSOR (CTR. OF GLASS-MIN.). CRANKCASE HEATER HAS BEEN ENERGIZED AT LEAST 2 HRS.
6. **check**
ICE BIN THERMOSTAT LOCATION AND ATTACHMENT IN STORAGE BIN.
7. **check**
ICE CHUTE ALIGNMENT WITH BIN OPENING.
8. **check**
WATER LEVEL IN PUMPING TANK.
9. **START MACHINE**
10. **check**
AT LEAST THREE COMPLETE CYCLES.

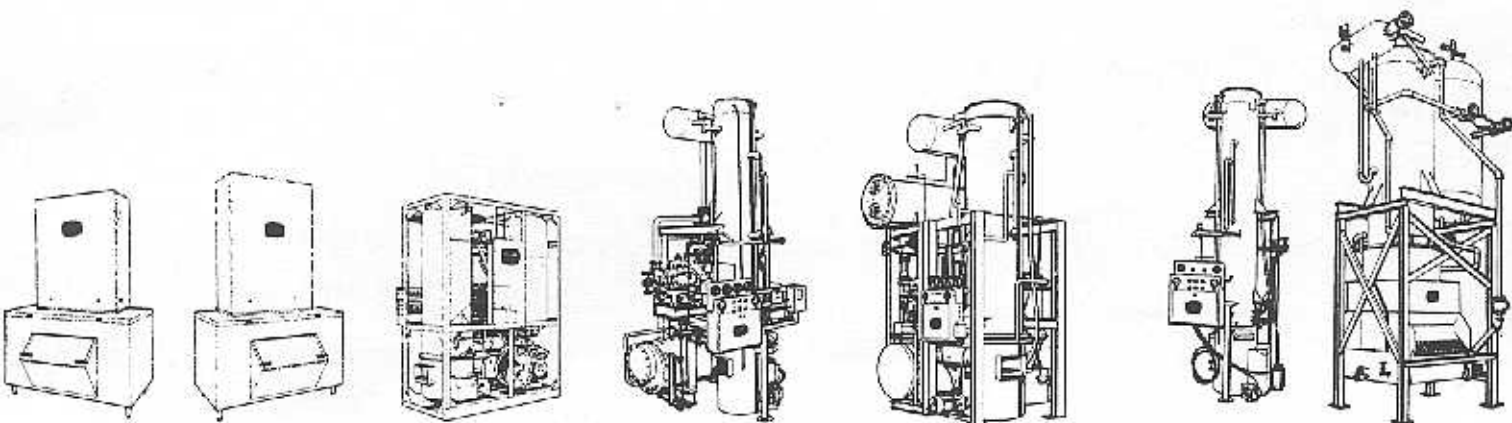

Vogt TUBE-ICE MACHINES

Vogt® revolutionized the commercial ice-making industry in 1937 when it built the first Tube-Ice Machine.® For the prior 50 years, throughout the world, all ice was made in cans. The process usually took 24 hours to freeze a block of ice, required an elaborate brine system, lots of labor, huge amounts of floor space and produced ice that was partially clear and partially opaque. In addition, the large blocks required cutters, crushers or cubers to get the ice into usable form and waste was high.

Vogt engineers met the challenge of producing hard, clear ice by freezing water on the inside surface of vertical tubes. Direct expansion of the refrigerant in the shell that surrounds the tubes quickly freezes the falling film of water in each tube. The constant flow of water over the ice during the freezing period assures that the ice will be clear and sparkling—free of impurities.

Then Vogt automated the entire process with simple, trouble-free

controls to thaw the ice from the tubes and automatically size it with a cutter into usable short cylinders or crushed ice when desired.

Vogt's complete line of automatic Tube-Ice Machines has revolutionized the ice making industry.

Often referred to as the "Iceman's Icemaker", today's Vogt Tube-Ice Machine is engineered and quality constructed of stainless steel and other high quality materials to perform dependably over decades of continuous service.

The low cost per ton of Tube-Ice ice is possible because of the space-saving design, a very low power requirement, the highest quality components and minimum labor and maintenance costs with extremely long service life.

Today's automatic Vogt Tube-Ice Machines are realizing energy savings of from 30% to 50% over all other hard ice machines.